



MP-A40 Series
SDK for iOS
Application Programmer's Guide

U00136276708

Seiko Instruments Inc.

U00136276700	August 2016
U00136276701	October 2016
U00136276702	January 2018
U00136276703	February 2019
U00136276704	November 2019
U00136276705	September 2020
U00136276706	July 2022
U00136276707	April 2023
U00136276708	July 2024

Copyright © 2016-2024 by Seiko Instruments Inc.
All rights reserved.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

iPad®, iPad Air®, iPad mini™, iPhone®, iPod® are trademarks of Apple Inc., registered in the U.S. and other countries.

App StoreSM is a service mark of Apple Inc.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

All other trademarks are the properties of their respective companies.

Seiko Instruments Inc. (hereinafter referred to as "SII") has prepared this manual for use by SII personnel, licensees, and customers. The information contained herein is the property of SII and shall not be reproduced in whole or in part without the prior written approval of SII.

SII reserves the right to make changes without notice to the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical, arithmetic, or listing errors.

SII ● is a trademark of Seiko Instruments Inc.

Introduction

This document describes the MP-A40 Series SDK for iOS (hereinafter referred to as "the SDK") provided by Seiko Instruments Inc. (hereinafter referred to as "SII").

Target Printers

This section lists the printers supported by the SDK.

Printer	Communication Interface
MP-A40 (Bluetooth supporting model)	Bluetooth
MP-A40 (Wireless LAN supporting model)	Wireless LAN

Table of Contents

Chapter 1	Product Overview	1-1
1.1	Function	1-1
1.2	Configuration	1-1
1.2.1	SII Print Class Library	1-2
1.2.2	Sample Program	1-2
Chapter 2	Product Specifications	2-1
2.1	Operating Environment.....	2-1
2.1.1	Applicable iOS Devices	2-1
2.1.2	Applicable iOS Versions.....	2-1
2.2	Operating Conditions	2-2
2.3	Precaution.....	2-2
Chapter 3	How to Use Library	3-1
3.1	Developmental Environment for iOS Application	3-1
3.2	Provided Files	3-2
3.3	Build Library into Xcode Projects	3-3
Chapter 4	Function of Library	4-1
4.1	Overview of Library	4-1
4.2	Structure of Library	4-1
4.3	Receive Data Process and Limitations.....	4-1
4.4	API Reference	4-2
4.4.1	Class	4-4
(1)	SII MpaPrinterManager	4-4
init	Instance	4-6
open	Start using printer	4-6
close	Finish using printer	4-7
setWriteTimeout	Set send timeout period	4-8
getWriteTimeout	Retrieve send timeout period.....	4-8
setResponseTimeout	Set receive timeout period	4-8
getResponseTimeout	Retrieve receive timeout period.....	4-9
write	Send Binary data	4-9
read	Retrieve receive data	4-9
getReadSize	Retrieve available receive data size	4-10
writeAndWaitResponse	Send and receive binary data	4-10
reset	Reset printer	4-11

getStatus	Retrieve printer status.....	4-12
startCallbackFunction	Start callback of printer status change	4-12
stopCallbackFunction	Finish callback of printer status change	4-13
registerStyleSheet	Register style sheet to printer	4-13
deleteStyleSheet	Delete style sheet in printer	4-14
registerLogo	Register logo to printer	4-14
deleteLogo	Delete logo in printer.....	4-15
getPrinterInformation		
getPrinterInformationNumber		
getPrinterInformationString	Retrieve printer information	4-15
getVersion	Retrieve SDK version	4-17
controlTransaction	Start/finish print data batch sending	4-17
selectStandardMode	Select standard mode.....	4-18
selectPageMode	Start page mode	4-19
printPageModeData	Print page mode data	4-20
setPageModeVerticalPosition	Specify vertical absolute position in page mode	4-20
setStandardModeArea	Specify print area in standard mode.....	4-21
setStandardModeAlignment	Alignment.....	4-22
setHorizontalPosition	Specify absolute position	4-22
setStandardModeBarcodeDirection	Select print direction for barcode or 2-dimensional barcode.....	4-23
setLineSpacing	Specify line space amount.....	4-23
setCharacterRightSpace	Specify character right space amount	4-24
selectCharacterSet	Select character set.....	4-24
getCharacterSet	Retrieve specified character set	4-25
selectInternationalCharacterSet	Select international character set	4-25
getInternationalCharacter	Retrieve specified international character set	4-25
setCharacterFormatting	Format character	4-26
printText	Send text data.....	4-27
printLogo	Print logo registered in printer	4-27
sendDataFile	Send file data.....	4-28
printBarcode	Print barcode	4-29
print2DCode	Print 2-dimensional barcode.....	4-33
printPageModeRectangle	Draw rectangular	4-35

feedLine	Feed paper by line	4-35
feedDotLine	Feed paper by dot.....	4-36
feedCutPosition	Feed paper to cut position	4-36
feedMarkPosition	Marked paper form feed	4-37
setLog	Specify log output	4-37
isOpened	Retrieve printer using status	4-38
(2) SIIMpaPrinterStatus	4-39
errOffline	Retrieve offline error status	4-39
errHardware	Retrieve hardware error status	4-39
errVoltage	Retrieve Vp Voltage error status	4-40
errHeadTemperature	Retrieve head temperature error status	4-40
errOutOfPaper	Retrieve out-of-paper error status	4-40
errMarkPaperJam	Retrieve paper jam error status while detecting marked paper.....	4-40
errCoverOpen	Retrieve paper cover open error status	4-40
errBattery	Retrieve battery error status	4-40
stateFeedSwitch	Retrieve feed switch status.....	4-41
statePaperFeed	Retrieve paper feed status	4-41
stateReturnWaiting	Retrieve return waiting status	4-41
stateFlashMemoryRewriting	Retrieve FLASH memory rewrite status	4-41
stateBattery	Retrieve battery voltage status	4-41
(3) SIIMpaPrinterDiscovery	4-42
startDiscoveryPrinter	Start printer search	4-42
cancelDiscoveryPrinter	Cancel printer search	4-43
getFoundPrinter	Retrieve information list of searched printer	4-44
(4) SIIMpaDiscoveredPrinter	4-45
printerModel	Retrieve printer model name	4-45
bluetoothAddress	Retrieve Bluetooth address	4-45
ipAddress	Retrieve IP address	4-45
macAddress	Retrieve MAC address.....	4-45
serialNumber	Retrieve Serial Number	4-46
4.4.2 Enumerated Type (Enum)	4-47
(1) PrinterInterface	4-47
(2) PrinterModel	4-47
(3) Dithering	4-47
(4) PrinterInformation	4-47
(5) TransactionFunction	4-48
(6) Direction	4-49
(7) Alignment	4-49
(8) CharacterSet	4-50
(9) InternationalCharacterSet	4-51
(10) CharacterType	4-51
(11) CharacterScale	4-52
(12) Underline	4-52
(13) Bold	4-52

(14) Reverse	4-52
(15) Rotate	4-53
(16) TypeBarcode	4-54
(17) ModuleWidthBarcode	4-54
(18) HriPositionBarcode	4-55
(19) NwRatioBarcode	4-55
(20) Type2DCode	4-55
(21) Mode2Dcode	4-55
(22) ModuleSize2DCode	4-57
(23) ErrorCorrect2DCode	4-59
(24) LogFileSize	4-60
(25) ErrorCode	4-60
4.4.2 Enumerated Type (Enum)	4-47

Chapter 5 Sample Program 5-1

5.1 Sample Program Overview	5-1
5.2 Sample Program Function	5-2
5.2.1 API Window	5-2
5.2.2 Settings Window	5-4
5.3 Precaution	5-5

Chapter 6 Disclaimer 6-1

Appendix A Character Sets (Character Code Table) A-1

A.1 Character Code Table	A-1
A.2 International Character Set	A-11

Chapter 1

Product Overview

This chapter describes the product overview of the SDK.

1.1 Function

The SII print class library included in the SDK, provides iOS applications with the functions to use SII printer MP-A40 series (hereinafter referred to as "printer").
Moreover, the SDK provides Xcode projects as a sample program for SII print class library.

1.2 Configuration

The SII print class library and the sample programs included in the SDK are located in the section surrounded by dashed lines in the iOS configuration diagram (Figure 1-1).

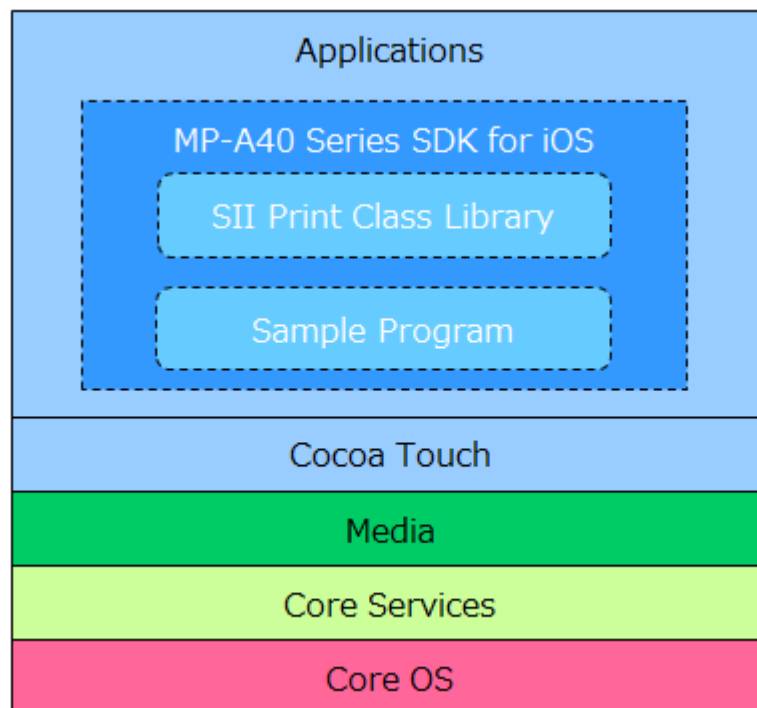


Figure 1-1

1.2.1 SII Print Class Library

By using SII Print Class Library (hereinafter referred to as "the library"), iOS applications can easily send print data and printer commands to printer through communication port (Bluetooth or TCP/IP) on an iOS device. Also, the applications can retrieve printer status.

The library provides the following functions.

- Connection/disconnection to/from a printer
- Sending data to a printer (print data and/or printer commands)
- Barcode print and 2-dimensional barcode print
- Sending a data file to a printer (print data and/or printer commands)
- Retrieving printer status
- Retrieving various responses from a printer
- Printer search by Bluetooth or TCP/IP

1.2.2 Sample Program

When an application used for communication with a printer by Bluetooth is registered to App Store, SII needs to apply it in advance. For the details, contact SII.

Chapter 2

Product Specification

This chapter describes the product specification of the library.

2.1 Operating Environment

2.1.1 Applicable iOS Devices

Applicable iOS devices for the library are shown in the following list.

iPhone models

- iPhone X
- iPhone 8
- iPhone 8 Plus
- iPhone 7
- iPhone 7 Plus
- iPhone SE
- iPhone 6s
- iPhone 6s Plus
- iPhone 6
- iPhone 6 Plus

iPad models

- iPad Pro 12.9-inch (2nd generation)
- iPad Pro 10.5-inch
- iPad (5th generation)
- iPad Pro 9.7-inch
- iPad Pro 12.9-inch (1st generation)
- iPad Air 2
- iPad mini 4
- iPad mini 3

iPod models

- iPod touch (6th generation)

2.1.2 Applicable iOS Versions

Applicable iOS versions for the library are shown in the following list.

- iOS 15-15.7.8
- iPadOS 15-15.7.8
- iOS 16-16.7.1
- iPadOS 16-16.7.1
- iOS 17-17.5.1
- iPadOS 17-17.5.1

2.2 Operating Conditions

This section describes the operating conditions for the library in the following table.

Set the Function Setting / function selection to the values shown in the following table before using the library.

See "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE" for details about Function Settings.

- **Memory Switch**

Table 2-1 Function Settings by Memory Switch

MS	Function	Value
1-1	Interface Selection (Interface)	1: USB/Wireless
1-2	Mark Mode Selection (Mark Mode)	0: Enable*1 1: Disable
1-3	Command System Selection (Command System)	000: ESC/POS
1-4		
1-5		
2-2	Realtime Command Selection (Realtime Command)	0: Enable
9-1	Automatic Status Response Selection <ESC/POS> (Auto Status Back <ESC/POS>)	0: Enable
9-2	Initialized Response Selection <ESC/POS> (Init. Response <ESC/POS>)	0: Enable

*1: Select "Enable" when feeding to home position of the marked thermal paper.

- **Bluetooth Communication Settings**

For Bluetooth communication settings, set the following values in addition to Table 2-1.

For the setting method, see the printer command "Set Bluetooth Communication" described in "MP-A40 SERIES Thermal Printer USER'S GUIDE".

Function	Value
iOS Auto Connection Selection (Auto Connection)	0: Disable 1: Enable*1
Profile Selection (Profile)	1: iAP2*2

*1: Select "Enable" when using **reset**.

*2: To switch the Profile Selection, press the POWER Switch 5 times within 3 seconds with the printer on.

2.3 Precaution

When using TCP/IP, the library cannot share the communication port with the printer driver or other libraries.

When using TCP/IP, wireless LAN access point which the iOS device is connected to and the printer need to be connected to the same network.

A concurrent connection from multiple apps to one printer is not supported when the multiple apps are started simultaneously by the Multitasking function for the iPad with iPadOS.

Chapter 3

How to Use Library

This chapter describes development environment for iOS application and how to use the library.

3.1 Developmental Environment for iOS Application

In order to develop iOS applications, following tools are required.

- Xcode 12.0 or later

This chapter and after in this document, it is assumed that there is an environment where you can use each tool.

3.2 Provided Files

The file configuration of the SII print class library is as follows.

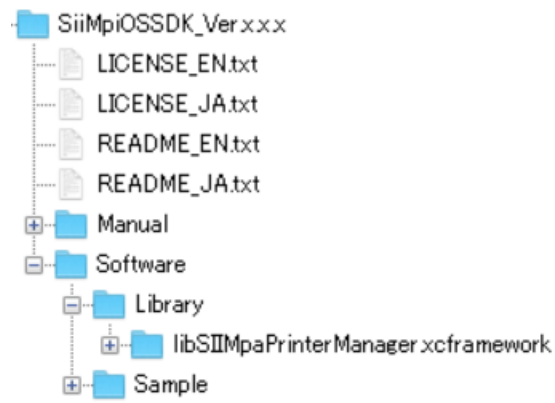 


Figure 3-1

The file format of the library is XCFramework. The file name of the library is libSiiMpaPrinterManager.xcframework.

3.3 Build Library into Xcode Projects

Using the project of the sample program (SIIMpaPrinterSample) included in the SDK as an example, this section describes how to build the library into the projects.

See "Chapter 5 Sample Program" for sample programs included in the SDK.


(NOTE) If the following libraries provided SDK Ver. 1.0.9 or earlier versions are included in the target project, delete them all.

- SIIMpaPrinterManager.a
- SIIMpaPrinterManager.h


(1) Open the Xcode project.

(2) Build Framework and a library.

- Build ExternalAccessory.framework into the project.
Select the target project in [Project Navigator], go [TARGETS] - [General] - [Frameworks, Libraries, and Embedded Content], open [Frameworks, Libraries, and Embedded Content].
And then, click [+], select ExternalAccessory.framework from the list and click [Add].

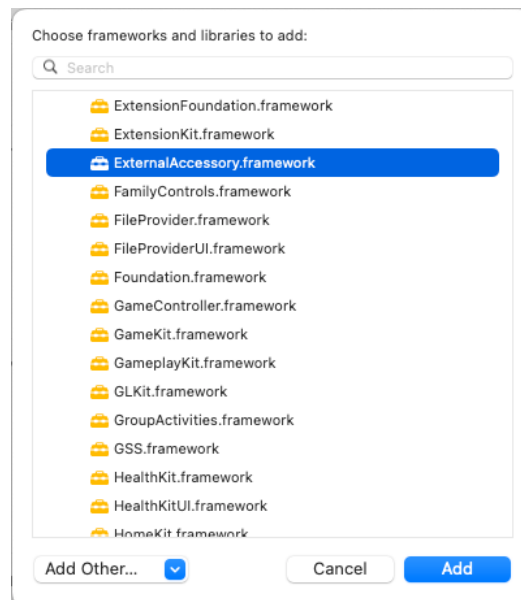

- Build this library into the project.
As well as the previous procedure, open [Frameworks, Libraries, and Embedded Content].
And then, click [+] and select this library.

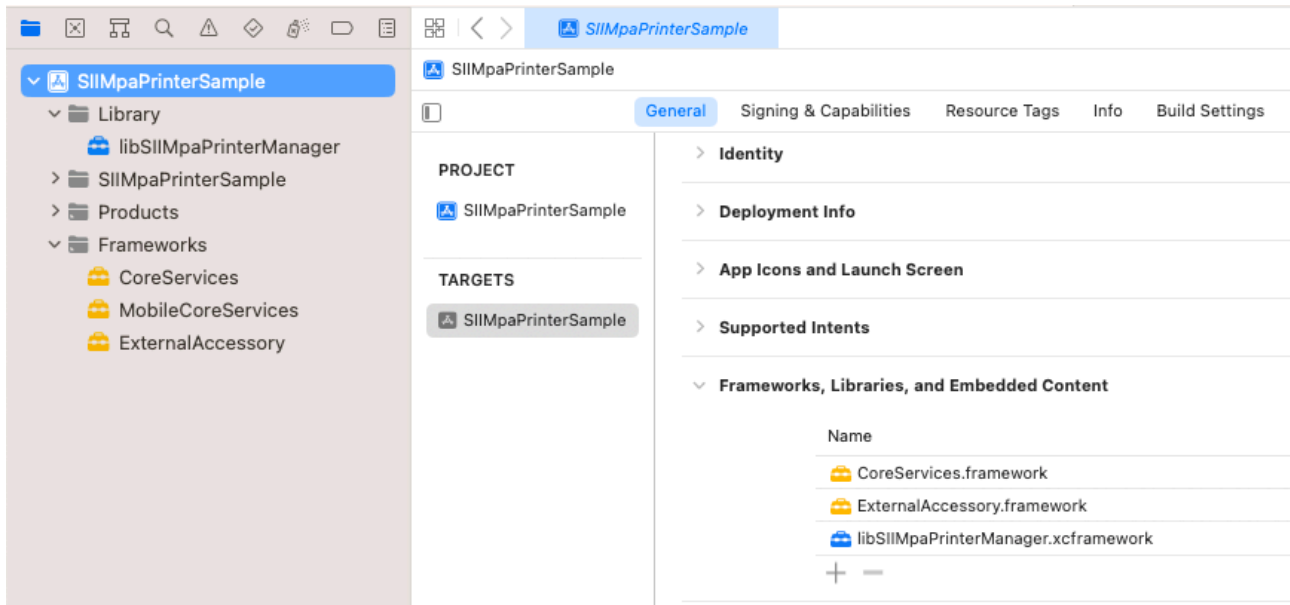

(3) Add the import definition for the built library to the source file of the application that uses this library as follows.

- For using Objective-C

```
#import <SIIMpaPrinterManager/SIIMpaPrinterManager.h>
```

- For using Swift

```
import SIIMpaPrinterManager
```

(4) Set the protocol name used by ExternalAccessory.framework.
Select xxxx.plist in [Project Navigator].
(For the sample program in the SDK, see SIIPrinterManagerSample-Info.plist.)

From the popup menu, select [Add Row] - [Supported external accessory protocols].

When open the added [Supported external accessory protocols], [Item 0] is displayed, then input "com.sii-ps.sii-eap" as the value.

▼ Supported external accessory protocols	Array	(1 item)
Item 0	String	com.sii-ps.sii-eap

By completing these procedures, functions of the library become available.

Chapter 4

Function of Library

This chapter describes the APIs for each class implemented in the library.

4.1 Overview of Library

The library provides the functions to use printers for iOS-enabled applications.

4.2 Structure of Library

The file format of the library is XCFramework. The file name of the library is `libSIIMpaPrinterManager.xcframework`.

In order to use the library in iOS applications, build the library into Xcode projects of iOS applications.

See "Chapter 3 How to Use the Library" for details about how to build the library into Xcode projects.

4.3 Receive Data Process and Limitations

This library buffers the receive data from the printer into the receive buffer in the SDK (hereinafter referred to as "the buffer") after starting to use the printer by `open`. Since the printer replies the auto status response every time the status changes, the receive data is buffered into the buffer sequentially. The maximum receive data to be buffered is 4096 bytes. When the printer is reconnected, the receive buffer in the SDK may collectively receive the data that was buffered in the printer before reconnecting.

The receive data buffered in the buffer can be retrieved by `read`. The receive data retrieved by `read` is deleted from the buffer.

When the buffered receive data exceeds 4096 bytes, the old data in buffer is discarded sequentially; therefore, execute `read` so that the receive data does not exceed 4096 bytes. The receive data size can be retrieved by `getReadSize`.

For the details of the each method, see "4.4 API Reference".

For the details of the each response, see "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE".

4.4 API Reference

• Class

Class Name	Description
SIIMpaPrinterManager	Class that provides the API used for communication with the printer and for printing.
SIIMpaPrinterStatus	Class that stores the printer status.
SIIMpaPrinterDiscovery	Class that searches the printer.
SIIMpaDiscoveredPrinter	Class that stores the printer information searched by printer searching.

• Enumerated type (enum)

Class Name	Description
PrinterInterface	Enumerator used for specifying the communication interface of open .
PrinterModel	Enumerator used for specifying the printer model of open .
Dithering	Enumerator used for dithering of resisterLogo and sendDataFile .
PrinterInformation	Enumerator used for specifying the printer information of getPrinterInformation , getPrinterInformationNumber and getPrinterInformationString .
TransactionFunction	Enumerator used for specifying the batch process control method of controlTransaction .
Direction	Enumerator used for specifying the print direction of selectPageMode .
Alignment	Enumerator used for specifying the print position of setStandardModeAlignment .
CharacterSet	Enumerator used for specifying the character set of selectCharacterSet .
InternationalCharacterSet	Enumerator used for specifying the international character set of selectInternationalCharacterSet .
CharacterType	Enumerator used for specifying the character font of setCharacterFormatting .
CharacterScale	Enumerator used for specifying the character scale of setCharacterFormatting .
Underline	Enumerator used for specifying the underline of setCharacterFormatting .
Bold	Enumerator used for specifying the bold print of setCharacterFormatting .
Reverse	Enumerator used for specifying the reverse print of setCharacterFormatting .
Rotate	Enumerator used for specifying the character rotation print of setCharacterFormatting , and for specifying print barcode direction of setStandardModeBarcodeDirection .

Class Name	Description
TypeBarcode	Enumerator used for specifying the barcode type of printBarcode .
ModuleWidthBarcode	Enumerator used for specifying the barcode module width or narrow element of printBarcode .
HriPositionBarcode	Enumerator used for specifying the barcode HRI characters of printBarcode .
NwRatioBarcode	Enumerator used for specifying the barcode N:W ratio of printBarcode .
Type2DCode	Enumerator used for specifying the 2-dimensional barcode type of print2DCode .
Mode2Dcode	Enumerator used for specifying the 2-dimensional barcode mode of print2DCode .
ModuleSize2Dcode	Enumerator used for specifying the 2-dimensional barcode module size of print2DCode .
ErrorCorrect2Dcode	Enumerator used for specifying the 2-dimensional barcode error correction level of print2DCode .
LogFileSize	Enumerator used for specifying the maximum size of the log file of setLog .
ErrorCode	Enumerator used for retrieving the error code by NSError .

4.4.1 Class

(1) SIIMpaPrinterManager

• Summary

This class provides the API used for communication with the printer and for printing.
This class provides the following functions.

Public Methods

Method	Function Summary	Standard Mode ^{*1}	Page Mode ^{*1}
SIIMpaPrinterManager	Constructor	✓	✓
init	Instance	✓	✓
open	Start using printer	✓	✓
close	Finish using printer	✓	✓
setWriteTimeout	Set send timeout period	✓	✓
getWriteTimeout	Retrieve send timeout period	✓	✓
setResponseTimeout	Set receive timeout period	✓	✓
getResponseTimeout	Retrieve receive timeout period	✓	✓
write	Send binary data	✓	✓
read	Retrieve receive data	✓	✓
getReadSize	Retrieve available receive data size	✓	✓
writeAndWaitResponse	Send and receive binary data	✓	✓
reset	Reset printer	✓	✓
getStatus	Retrieve printer status	✓	✓
startCallbackFunction	Start callback of printer status change	✓	✓
stopCallbackFunction	Finish callback of printer status change	✓	✓
registerStyleSheet	Register style sheet to printer	✓	✓
deleteStyleSheet	Delete style sheet in printer	✓	✓
registerLogo	Register logo to printer	✓	✓
deleteLogo	Delete logo in printer	✓	✓
getPrinterInformation	Retrieve printer information	✓	✓
getPrinterInformationNumber		✓	✓
getPrinterInformationString		✓	✓
getVersion	Retrieve SDK version	✓	✓
controlTransaction	Start/finish print data batch sending	✓	✓
selectStandardMode	Start standard mode	-	✓
selectPageMode	Start page mode	✓	-
printPageModeData	Print page mode data	-	✓ ^{*2}
setPageModeVerticalPosition	Specify vertical absolute position in page mode	-	✓ ^{*2}

Method	Function Summary	Standard Mode ^{*1}	Page Mode ^{*1}
setStandardModeArea	Specify print area in standard mode	✓ ^{*3}	-
setStandardModeAlignment	Alignment	✓ ^{*3}	-
setHorizontalPosition	Specify absolute position	✓	✓
setStandardModeBarcodeDirection	Select print direction for barcode or 2-dimensional barcode	✓ ^{*3}	-
setLineSpacing	Specify line space amount	✓ ^{*4}	✓ ^{*4}
setCharacterRightSpace	Specify character right space amount	✓ ^{*4}	✓ ^{*4}
selectCharacterSet	Select character set	✓	✓
getCharacterSet	Retrieve specified character set	✓	✓
setInternationalCharacterSet	Select international character set	✓	✓
getInternationalCharacter	Retrieve specified international character set	✓	✓
setCharacterFormatting	Format character	✓	✓
printText	Send text data	✓	✓
printLogo	Print logo registered in printer	✓	✓
sendDataFile	Send file data	✓	✓
printBarcode	Print barcode	✓	✓
print2DCode	Print 2-dimensional barcode	✓	✓
printPageModeRectangle	Draw rectangular	-	✓ ^{*2}
feedline	Feed paper by line	✓	✓
feedDotLine	Feed paper by dot	✓	✓
feedCutPosition	Feed paper to cut position	✓	✓
feedMarkPosition	Marked paper form feed	✓	✓
setLog	Specify log output	✓	✓

*1 ✓: Enable, -: Disable

*2 When use this method, execute **SelectPageMode** beforehand to start page mode.

*3 When use this method, execute **SelectStandardMode** beforehand to start standard mode.

*4 Independent settings are available for standard mode and page mode respectively.

Public Properties

Property	Function Summary	Standard Mode ^{*1}	Page Mode ^{*1}
isOpened	Retrieve printer using status	✓	✓

*1 ✓: Enable, -: Disable

• Public Methods

<code>init</code>	Instance
-------------------	----------

This method initializes the instance of **SIIMpaPrinterManager** class.

Syntax - (id) **init**;

Return When succeeded, the initialized instance of **SIIMpaPrinterManager** class is returned. When failed, **nil** is returned.

Example **SIIMpaPrinterManager *printerManager**
 = **[[SIIMpaPrinterManager alloc]init];**

<code>open</code>	Start using printer
-------------------	---------------------

Starts using a printer.

Syntax - (BOOL) **open:** (PrinterInterface) **printerInterface**
 printerModel: (PrinterModel) **printerModel**
 address: (NSString*) **address**
 socketKeepingTime: (NSInteger) **socketKeepingTime**
 error: (NSError**) **error**;

Parameter	printerInterface	Communication interface constant See "4.4.2(1) PrinterInterface " for available settings.
	printerModel	Printer model constant See "4.4.2(2) PrinterModel " for available settings.
	address	Varies depending on printerInterface setting. <ul style="list-style-type: none"> • When specify SII_MPM_PRN_IF_TCP: In address, specify IP address of the printer to connect. Example: "192.168.0.190", "host" • When specify SII_MPM_PRN_IF_BT: In address, specify Bluetooth address of the printer paired with iOS device. Example: "00:11:22:AA:BB:CC"
	socketKeepingTime	Varies depending on printerInterface setting. <ul style="list-style-type: none"> • When specify SII_MPM_PRN_IF_TCP: The range is 60 to 300. When the specified value is below 60, the value is set to 60, when the specified value exceeds 300, the value is set to 300. In socketKeepingTime, specify the same value as the timeout period of unconnected communication specified in printer wireless LAN setting. The default value of the timeout period of unconnected communication is 300 seconds. For the details, see "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE". • When specify SII_MPM_PRN_IF_BT: The specified value is ignored.
	error	Error object reference.

Return value	<p>The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error.</p> <p>YES Normal NO Error</p>
Description	<p>This method connects to a printer specified by printerInterface through a communication interface specified by printerModel.</p> <p>Monitoring the printer status is started by this method. The latest printer status is retrieved by getStatus. The change of printer status can be notified as an event by onStatusChanged, startCallbackFunction, or stopCallbackFunction.</p>
Note	<p>Do not disable the automatic status response by printer command "Automatic Status Back Enable/Disable" or function settings. In that case, the printer status cannot be monitored, and the related function cannot be operated. For the automatic status response and the function settings, see "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE".</p> <p>When data is sent to a printer through TCP/IP connection and the socket keeping time is passed, communication socket is discarded. After that, a communication socket is created again and connection starts. If the printer is requested to connect from the other host on the same network at the timing of the communication socket discarding, the printer establishes the communication with the other host and the reconnection may be failed.</p> <p>A concurrent connection from multiple apps to one printer is not supported.</p>

close

Finish using printer

Finishes using the printer and monitoring the printer status.

Syntax	<code>- (BOOL) close: (NSError**) error;</code>
Return value	<p>The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error.</p> <p>YES Normal NO Error</p>
Description	<p>This method stops communicating with the printer connected by open.</p> <p>When this method is executed during data transmission, the communication will be disconnected after all data is transmitted and printing operation is completed, or after the receive timeout period set by setResponseTimeout.</p> <p>Print data stored by controlTransaction is discarded by this method.</p>
Note	<p>In Bluetooth communication, set sufficient receive timeout period in consideration of the time required for printing.</p> <p>The receive timeout period needs approximately 10000 milliseconds for the print length 150 mm.</p> <p>If Bluetooth communication is disconnected while sending data, the data transmission and reception may not be possible due to abnormal communication between the iOS device and the printer.</p>

Specifies the send timeout period.

Syntax - (void) **setWriteTimeout:** (NSInteger) writeTimeout;

Parameter **writeTimeout** Send timeout period (millisecond)
 The range is 1000 to 90000.
 When the specified value is below 1000, the value is set to 1000.
 When the specified value exceeds 90000, the value is set to 90000.
 When the value is not set in this method, the send timeout period is 10000 seconds (default value).

Description The specified value can be retrieved by **getWriteTimeout**.

This method is enabled in the following methods.

- **write**
- **writeAndWaitResponse** (Transmission process part)
- **registerLogo**
- **registerStyleSheet**
- **controlTransaction**
 (when **SII_MPM_TRANSACTION_PRINT** is selected in **control**)
- **printText**
- **sendDataFile**
- **printBarcode**
- **print2DCode**

Retrieves the send timeout period.

Syntax - (NSInteger) **getWriteTimeout**;

Return value Send timeout period (millisecond)

Specifies the receive timeout period.

Syntax - (void) **setResponseTimeout:** (NSInteger) respTimeout;

Parameter **respTimeout** Receive timeout period (millisecond)
 The range is 1000 to 90000.
 When the specified value is below 1000, the value is set to 1000.
 When the specified value exceeds 90000, the value is set to 90000.
 When the value is not set in this method, the send timeout period is 10000 seconds (default value).

Description The specified value is retrieved by **getResponseTimeout**.

This method is enabled in the following methods.

- **writeAndWaitResponse**
- **getPrinterInformation**
- **getPrinterInformationNumber**
- **getPrinterInformationString**

Retrieves the receive timeout period.

Syntax - (NSInteger) **getResponseTimeout**;

Return value Receive timeout period (millisecond)

Sends the binary data.

Syntax - (BOOL) **write**: (NSData*) binary
offset: (NSInteger) offset
error: (NSError**) error;

Parameter **binary** Binary data to send to a printer
A maximum of 16 KB (16384 bytes) of data size can be specified.

offset Specification of the starting position of the data send

error Error object reference

Return value The following value may be thrown when an error occurs while calling this method.
When an error occurs, see **NSError** object specified by **error**.

YES Normal

NO Error

Description When **controlTransaction** is not used, the timeout period specified in **setWriteTimeout** is valid.

Do not include a printer command that initializes the printer other than the printer command "Initialize Printer" in the data to send. When perform Hardware Reset, use **reset**. For printer initialization, see "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE".

This method is aborted by **reset**.

Retrieves the receive data which size is specified by **bufferSize** stored in **readBinary**.

Syntax - (BOOL) **read**: (NSMutableData**) readBinary
bufferSize: (NSInteger) bufferSize
error: (NSError**) error;

Parameter **bufferSize** Receive data size (byte)
The range is 1 to 4096.
When the specified value exceeds 4096, the value is set to 4096.
When the specified value is below 0, sends the error notice.

Return value The following value may be thrown when an error occurs while calling this method.
When an error occurs, see **NSError** object specified by **error**.

YES Normal

NO Error

Description	<p>When entire receive data buffered in the buffer needs to be retrieved, specify the value in bufferSize retrieved by getReadSize.</p> <p>When this method is reexecuted after retrieving receive data by this method, retrieving starts from the following receive data in the buffer.</p> <p>For the procedure and the limitation, see "4.3 Receive Data Process and the Limitations".</p>
-------------	---

getReadSize	Retrieve available receive data size
--------------------	---

Retrieves the available receive data size.

Syntax	<pre>- (BOOL) getReadSize: (NSInteger*) readSize error: (NSError**) error;</pre>	
Parameter	readsize	Receive data size (byte)
	error	Error object reference
Return value	<p>The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error.</p> <p>YES Normal NO Error</p>	

writeAndWaitResponse	Send and receive binary data
-----------------------------	-------------------------------------

Sends the binary data and retrieves the receive data after this method is executed.

Syntax	<pre>- (BOOL) writeAndWaitResponse: (NSData*) sendBinary receiveBinary: (NSMutableData**) receiveBinary bufferSize: (NSInteger) bufferSize respControl: (BOOL) respControl incAsbData: (BOOL) incAsbData error: (NSError**) error;</pre>	
Parameter	sendBinary	<p>Data to send</p> <p>A maximum data size is 16 KB (16384 bytes) can be specified.</p>
	reveiveBinary	Data to receive
	bufferSize	<p>Maximum size of the data to send</p> <p>The range is 1 to 10485760.</p> <p>When the specified value exceeds 10485760, the value is set to 10485760.</p>
	respControl	<p>Operation selection for receive process</p> <p>YES Receive some data or continue to receive data until timeout period is over.</p> <p>NO Receive the specified sized data in bufferSize or continue to receive data until timeout period is over.</p>
	incAsbData	<p>Include the automatic status response to the receive data or not</p> <p>YES Include</p> <p> Respond the receive data as it is.</p> <p>NO Not include</p> <p> Respond the receive data excluding the automatic status response.</p>

Return value	<p>The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error.</p> <p>YES Normal NO Error</p>
Description	<p>This method is appropriate to send printer command for responding value of character string amount or capacity, and to retrieve the respond.</p> <p>Next method execution after this method execution is not processed until completion of this method receiving. For retrieving the execution response or progress response, use read but not this method. For the details of execution response or progress response, see "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE".</p> <p>For sending, the timeout period specified in setWriteTimeout is valid.</p> <p>For receiving, the timeout period specified in setResponseTimeout is valid.</p> <p>Do not include a printer command that initializes the printer other than the printer command "Initialize Printer" in the data to send. When perform Hardware Reset, use reset. For printer initialization, see "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE".</p> <p>This method is aborted by reset.</p>

reset

Reset printer

Resets the printer.

Syntax - (BOOL) **reset:** (NSError**) error;

Parameter **error** Error object reference

Return value The following value may be thrown when an error occurs while calling this method. When an error occurs, see **NSError** object specified by **error**.

YES Normal
NO Error

Description When this method is executed while the following method is being processed, the process is aborted. The unsent or unreceived data of following methods are discarded.

- **write**
- **writeAndWaitResponse**
- **controlTransaction**
 (When **SII_MPM_TRANSACTION_PRINT** is selected in **control**)
- **printText**
- **sendDataFile**
- **getPrinterInformation**
- **getPrinterInformationNumber**
- **getPrinterInformationString**

While this method is being executed, the printer status becomes offline.

After this method is executed, wait for a few seconds before data send method is executed. Data send during reset may cause data lost.

When this method is executed but the printer is in the condition of no data accepting, the printer reset may not be executed normally, and there is a possibility of character corruption.

Stores the latest printer status to `getStatus`.

```
Syntax      - (BOOL) getStatus: (SIIMpaPrinterStatus**) getStatus
              error: (NSError**) error;
```

Parameter	getStatus	Printer status
	error	Error object reference

Return value	Printer status is returned by <code>SIIMpaPrinterStatus</code> class. According to the method in <code>SIIMpaPrinterStatus</code> class, the printer status can be retrieved. For the method in <code>SIIMpaPrinterStatus</code> class, see "4.4.1(2) <code>SIIMpaPrinterStatus</code> ".
--------------	---

The following value may be thrown when an error occurs while calling this method. When an error occurs, see **`NSError`** object specified by **`error`**.

YES	Normal
NO	Error

Starts the callback according to the printer status change.

```
Syntax      - (BOOL) startCallbackFunction: (SEL) method
              target: (NSObject*) target
              error: (NSError**) error;
```

Parameter	method	Selector specification Specify the selector of the execution method by the callback.
	target	Object specification Specify the object including the method specified by method .
	error	Error object reference

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see <code>NSError</code> object specified by <code>error</code> .
--------------	--

YES	Normal
NO	Error

Description	The sample of execution method by the callback is follows.
-------------	--

```
- (BOOL) onStatusChanged: (SIIMpaPrinterStatus*) status
```

In **status**, the instance of **SIIMpaPrinterStatus** class includes the printer status at the point of time when it is changed is substituted. The printer status can be retrieved from **status** by the property of **SIIMpaPrinterStatus** class. See "4.4.1(2) **SIIMpaPrinterStatus**" for the property of **SIIMpaPrinterStatus** class.

Finish callback of printer status change

Finishes the callback started by `startCallbackFunction`.

Syntax - (BOOL) **stopCallbackFunciton:** (NSError**) error;

Parameter	error	Error object reference
-----------	--------------	------------------------

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .
--------------	--

YES	Normal
NO	Error

```
registerStyleSheet
```

Register style sheet to printer

Registers the style sheet to the printer.

```
Syntax      - (BOOL) registerStyleSheet: (NSString*) filePath
              registerNumber: (NSInteger) regNum
              error: (NSError**) error;
```

Parameter	filePath	File path for style sheet
-----------	-----------------	---------------------------

regNum	Style sheet number The range is 1 to 4.
---------------	--

error	Error object reference
--------------	------------------------

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .
--------------	--

YES	Normal
NO	Error

Description	A maximum of 4 sheets can be registered.
-------------	--

The file extension for supporting style sheet is .css.

The maximum file size that can be registered is 1 MB (1048576 bytes).

The maximum number that can be registered in 1 style sheet is 64.

When specify a style sheet number which style sheet is already registered, the style sheet is overwritten.

For the available style sheet to register, see the printer command "Style Sheet Registration" in "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE".

The timeout period specified in `setWriteTimeout` is valid.

Deletes the style sheet registered to the printer.

Syntax	- (BOOL) deleteStyleSheet: (NSInteger) regNum error: (NSError**) error;	
Parameter	regNum	Style sheet number The range is 1 to 4.
	error	Error object reference
Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .	
	YES	Normal
	NO	Error

Registers the image data to a printer as a logo.
The method of syntax (a), dithering can be specified.
The method of syntax (b), dithering is fixed to be enabled.

Syntax	(a)- (BOOL) registerLogo: (NSString*) filePath registerNumber: (NSInteger) regNum dithering: (Dithering) dithering error: (NSError**) error;	
	(b)- (BOOL) registerLogo: (NSString*) filePath registerNumber: (NSInteger) regnum error: (NSError**) error;	
Parameter	filePath	File path of image data
	regNum	Logo number The range is 0 to 99.
	dithering	Dithering See "4.4.2(3) Dithering " for available settings.
	error	Error object reference
Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .	
	YES	Normal
	NO	Error
Description	<p>The file extension for supporting image data is .bmp, .jpg, .jpeg, and .png.</p> <p>The color image data is converted to monochrome image by binarization.</p> <p>The maximum file size that can be registered is 1 MB (1048576 bytes).</p> <p>The maximum image sizes that can be registered are 8192 dots in width and 2304 dots in height.</p> <p>The registered situation for the logo registered by this method can be confirmed by executing getPrinterInformation or getPrinterInformationString with specifying SII_MPM_GET_NV_MEM_KEYCODE_LIST in prnInfo.</p>	

The timeout period specified in `setWriteTimeout` is valid.

Delete logo in printer

Syntax

```
- (BOOL) deleteLogo: (NSInteger) regNum
               error: (NSError**) error;
```

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .
--------------	--

Description	The logo deleted situation by this method can be confirmed by executing <code>getPrinterInformation</code> or <code>getPrinterInformationString</code> with specifying SII MPM GET NV MEM KEYCODE LIST in <code>prnInfo</code> .
-------------	---

Retrieve printer information

Syntax (a)- (BOOL) **getPrinterInformation:** (PrinterInformation) prnInfo
printerInformationValue: (NSData**) prnInfoValue
error: (NSError**) error;

```
(c)- (BOOL) getPrinterInformationString:
    (PrinterInformation) prnInfo
    printerInformationValue: (NSString**) prnInfoValue
    error: (NSError**) error;
```

error	Error object reference
--------------	------------------------

YES	Normal
NO	Error

Description Based on the specification in `prnInfo`, sends printer command to the printer for responding the printer information, analyzes the response data by the response extension, and stores it into `prnInfoValue` in the format of the numeric array, numerical value, and character string.

In all `PrinterInformation`, the printer information can be retrieved in the numeric array by using the syntax (a).

In the following `PrinterInformation`, the printer information can be retrieved in the numerical value by using the syntax (b).

- `SII_MPM_GET_NV_MEM_CAP`
- `SII_MPM_GET_NV_MEM_REM_CAP`
- `SII_MPM_GET_REM_USER_MEM_CAP`
- `SII_MPM_GET_REM_USER_MEM_CAP_DEFRAG`
- `SII_MPM_GET_PRN_ID_MODEL`
- `SII_MPM_GET_PRN_ID_TYPE`
- `SII_MPM_GET_PRN_ID_ROM_VER`
- `SII_MPM_GET_PRN_ID_FIRM_CHECKSUM_BOOT`
- `SII_MPM_GET_PRN_ID_FIRM_CHECKSUM_MAIN`
- `SII_MPM_GET_PRN_ID_FIRM_CHECKSUM`
- `SII_MPM_GET_MAINT_NUM_FEED_LINE`
- `SII_MPM_GET_MAINT_NUM_HEAD_ACTIVE`
- `SII_MPM_GET_MAINT_DRIVE_TIME`
- `SII_MPM_GET_MAINT_NUM_FEED_LINE_INTEGRATION`
- `SII_MPM_GET_MAINT_NUM_HEAD_ACTIVE_INTEGRATION`
- `SII_MPM_GET_MAINT_DRIVE_TIME_INTEGRATION`
- `SII_MPM_GET_HFONT_24_CHECKSUM`
- `SII_MPM_GET_HFONT_16_CHECKSUM`
- `SII_MPM_GET_FFONT_CHECKSUM`
- `SII_MPM_GET_FFONT_DATA_SIZE`
- `SII_MPM_GET_FFONT_ROM_ID`

In the following `PrinterInformation`, the printer information can be retrieved in the character string by using the syntax (c).

- `SII_MPM_GET_NV_MEM_KEYCODE_LIST`
- `SII_MPM_GET_PRN_ID_FIRM_VER_MAIN`
- `SII_MPM_GET_PRN_ID_MFR`
- `SII_MPM_GET_PRN_ID_MODEL_NAME`
- `SII_MPM_GET_PRN_ID_FIRM_VER_BOOT`
- `SII_MPM_GET_HFONT_24_ID`
- `SII_MPM_GET_HFONT_24_INT_CHAR`
- `SII_MPM_GET_HFONT_16_ID`
- `SII_MPM_GET_HFONT_16_INT_CHAR`
- `SII_MPM_GET_FFONT_LANG`
- `SII_MPM_GET_FFONT_STANDARD`
- `SII_MPM_GET_FFONT_COMPANY`

The timeout period specified in `setResponseTimeout` is valid.

This method is aborted by `reset`.

Retrieves the SDK version as a character string.

Syntax - (NSString*) **getVersion**;

Return value SDK version character string (Example: When the SDK version is Ver.1.0.0, the return value is "1.0.0")

Description This method can be executed regardless of whether **isOpen** is YES or NO.

Buffers the print data in the target method for batch process and sends the data in buffer to the printer.

Syntax - (BOOL) **controlTransaction**: (TransactionFunction) **control**
error: (NSError**) error;

Parameter **control** Operation selection of batch process
See "4.4.2(5) TransactionFunction" for available settings.

error Error object reference

Return value The following value may be thrown when an error occurs while calling this method.
When an error occurs, see **NSError** object specified by **error**.

YES Normal

NO Error

Description The target method for the batch process is as follows.

- **write**
- **selectStandardMode**
- **selectPageMode**
- **printPageModeData**
- **setPageModeVerticalPosition**
- **setStandardModeArea**
- **setStandardModeAlignment**
- **setHorizontalPosition**
- **setStandardModeBarcodeDirection**
- **setLineSpacing**
- **setCharacterRightSpace**
- **setCharacterFormatting**
- **printText**
- **printLogo**
- **sendDataFile**
- **printBarcode**
- **print2DCode**
- **printPageModeRectangle**
- **feedLine**
- **feedDotLine**
- **feedCutPosition**
- **feedMarkPosition**

By **control**, buffering of the print data in the target method for batch process is started or finished.

- Start buffering
When this method with **SII_MPM_TRANSACTION_START** in **control** is executed, the buffering of the print data in the target method for batch process is started. The print data in the target method for batch process executed during buffering is not sent to the printer but stored in the buffer. Any method other than the target method for batch process is immediately executed.
- Finish buffering
When this method with **SII_MPM_TRANSACTION_PRINT** in **control** is executed, the buffering of the print data in the target method for batch process is finished, and the data in the buffer is sent to the printer.
When this method with **SII_MPM_TRANSACTION_CLEAR** in **control** is executed, the buffering is interrupted and the data in the buffer is discarded.

When this method with **SII_MPM_TRANSACTION_PRINT** or **TRANSACTION_CLEAR** in **control** is executed without starting buffering, an error occurs.

When this method with **SII_MPM_TRANSACTION_START** in **control** is executed during buffering, the data in the buffer is discarded but the buffering is continued.

When no data exists in the buffer and this method with **SII_MPM_TRANSACTION_PRINT** in **control** is executed, the data is not sent to the printer and the buffering is finished.

When this method with **SII_MPM_TRANSACTION_PRINT** in **control** is being executed and this method with **SII_MPM_TRANSACTION_START** in **control** is executed from another thread, the data sending by this method with **SII_MPM_TRANSACTION_PRINT** in **control** is continued, this method with **SII_MPM_TRANSACTION_START** in **control** is executed from another thread, and the buffering is newly started.

The maximum buffer size depends on the system.

When the data in the buffer exceeds the maximum size, the execution of the target method for batch process becomes error, but the data in the buffer is stored.

When the buffered data is sending by **SII_MPM_TRANSACTION_PRINT**, the timeout period specified in **setWriteTimeout** is valid.

When an error occurs during sending data by **SII_MPM_TRANSACTION_PRINT**, the remained data for sending is discarded.

When **reset** is executed during sending data **SII_MPM_TRANSACTION_PRINT**, the remained data for sending is discarded.

selectStandardMode	Select standard mode
---------------------------	-----------------------------

Starts standard mode.

Syntax - (BOOL) **selectStandardMode:** (NSError**) error;

Parameter **error** Error object reference

Return value The following value may be thrown when an error occurs while calling this method.
When an error occurs, see **NSError** object specified by **error**.

YES Normal
NO Error

Description Right after execution of **open**, standard mode is selected.

When page mode is interrupted by **selectPageMode**, the page mode data is discarded.

Starts page mode and specify the print area and the direction.

Syntax

```
- (BOOL) selectPageMode: (NSInteger) startX
    startY: (NSInteger) startY
    width: (NSInteger) width
    height: (NSInteger) height
    direction: (Direction) direction
    error: (NSError**) error;
```

Parameter	startX	Horizontal start point (dot) The range is 0 to 2399.
	startY	Vertical start point (dot) The range is 0 to 2399.
	width	Print area width (dot) The range is 1 to 2400.
	height	Print area height (dot) The range is 1 to 2400.
	direction	Print direction (dot) See "4.4.2(6) Direction " for available settings.
	error	Error object reference

Return value The following value may be thrown when an error occurs while calling this method.
When an error occurs, see **NSError** object specified by **error**.

YES	Normal
NO	Error

Description

When **startX** exceeds the print width, the print area setting by this method is disabled.
When (**startX** + **width**) exceeds the print width, **startX** is set to the specified value and **width** is set to (print width – **startX**).
When (**startY** + **height**) is 2400 or more, **startY** is set to the specified value and **height** is set to (2400 – **startY**).
The print width can be specified in the function setting. For the print width and the function setting, see "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE".

Layout the character, image, barcode, and 2-dimensional barcode in the optional print position within the specified print area and configure the page mode data by **setHorizontalPosition** and **setPageModeVerticalPosition**.

When page mode is interrupted by **selectStandardMode**, the page mode data stored in the printer will be discarded.

When the printer is reset, the setting is back to standard mode.

Prints the page mode data.

Syntax - (BOOL) **printPageModeData**: (NSError**) error;

Parameter	error	Error object reference
-----------	--------------	------------------------

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .
--------------	--

YES	Normal
NO	Error

Description	Execute this method after starting page mode by <code>selectPageMode</code> and configuring the page mode data within the print area.
-------------	---

This method is ignored in standard mode.

Specify the absolute position of print data in vertical direction within the print area in page mode.

```
Syntax      - (BOOL) setPageModeVerticalPosition:
              (NSInteger) verticalPosition
              error: (NSError**) error;
```

Parameter	verticalPosition	Data mapping starting position in vertical direction (dot) The range is 0 to 2399.
-----------	-------------------------	---

error	Error object reference
--------------	------------------------

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .
--------------	--

YES	Normal
NO	Error

Description	The start point varies depending on the print direction in page mode specified for direction in selectPageMode . For the print direction and the start point, see "4.4.2(6) Direction ".
-------------	---

The setting of this method is disabled in standard mode.

When the specified value exceeds the print area, it is ignored.

When the printer is reset, the setting in this method is disabled.

Specify the print area in standard mode.

```
Syntax      - (BOOL) setStandardModeArea: (NSInteger) leftMargin
              printAreaWidth: (NSInteger) prnAreaWidth
              error: (NSError**) error;
```

Parameter	leftMargin	Left margin (dot) The range 0 to 831.
-----------	-------------------	--

prnAreaWidth	Print area width (dot) The range 1 to 832.
---------------------	---

error	Error object reference
--------------	------------------------

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see <code>NSError</code> object specified by <code>error</code> .
--------------	--

YES	Normal
NO	Error

Description	The relation between left margin and print area width is shown in Figure 4-1. The print data is mapped to the shaded print area.
-------------	--

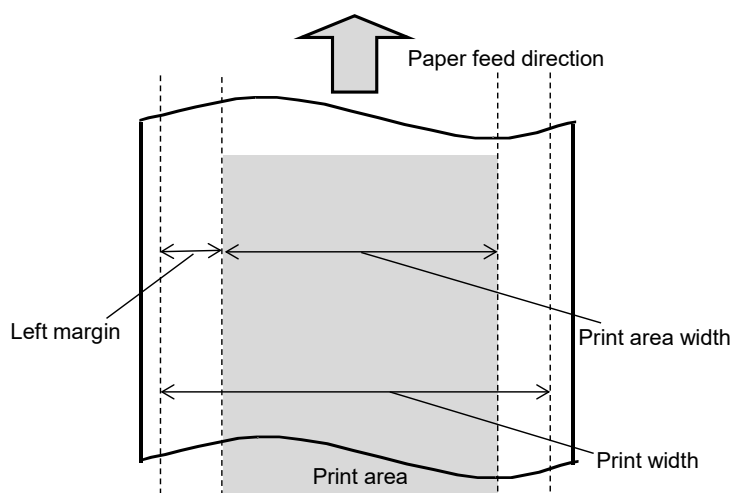 


Figure 4-1

The setting of this method is disabled in page mode. When this method is executed in page mode, the setting is reflected to the print after starting standard mode.

When the print data remains in the printer, this method is not executed. Execute this method after the printing is completed.

When the specified value in **leftMargin** exceeds the print width, the value is set to the print width. When the specified value in **prnAreaWidth** exceeds the print width, the value is set to the difference between the print width and the left margin.

The print width can be specified in the function setting. For the print width and the function setting, see "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE".

When the printer is reset, `leftMargin` is set to 0 and `prnAreaWidth` is initialized to the print width.

Set the alignment in standard mode.

```
Syntax      - (BOOL) setStandardModeAlignment: (Alignment) align
              error: (NSError**) error;
```

Parameter	align	Alignment
		See "4.4.2(7) Alignment " for available settings.

error	Error object reference
--------------	------------------------

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see <code>NSError</code> object specified by <code>error</code> .
--------------	--

YES	Normal
NO	Error

Description	When the print area is specified in <code>setStandardModeArea</code> , the position is aligned within the specified print area.
-------------	---

The setting of this method is disabled in page mode. When this method is executed in page mode, the setting is reflected to the print after starting standard mode.

When the print data remains in the printer, this method is not executed. Execute this method after the printing is completed.

When the printer is reset, the setting in this method is back to the default value.

Specify the absolute horizontal position.

```
Syntax      - (BOOL) setHorizontalPosition: (NSInteger) horizontalPosition
              error: (NSError**) error;
```

Parameter	horizontalPosition	Horizontal print starting position (dot). The range is 0 to 2399.
-----------	---------------------------	--

error	Error object reference
--------------	------------------------

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see <code>NSError</code> object specified by <code>error</code> .
--------------	--

YES	Normal
NO	Error

Description	In standard mode, the left margin is based on the one specified in <code>setStandardModeArea</code> .
-------------	---

In page mode, the start point changes depend on the specified print direction in **direction** of **selectPageMode**. For print direction and start point, see "4.4.2(6) **Direction**".

The value specified in `setStandardModeArea` and `selectPageMode` that exceeds the print area is ignored.

When the printer is reset, the setting in this method is disabled.

<code>setStandardModeBarcodeDirection</code>	Select print direction for barcode or 2-dimensional barcode
--	---

<code>setStandardModeBarcodeDirection</code>	Select print direction for barcode or 2-dimensional barcode
--	---

Specify the print direction for barcode or 2-dimensional barcode in standard mode.

```
Syntax      - (BOOL) setStandardModeBarcodeDirection: (Rotate) rotate
              error: (NSError**) error;
```

Parameter	rotate	Print direction See "4.4.2(15) Rotate " for available settings.
-----------	---------------	---

<code>error</code>	Error object reference
--------------------	------------------------

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .
--------------	--

YES	Normal
NO	Error

Description	By executing <code>printBarcode</code> or <code>print2DCode</code> , the setting of this method is back to the default value.
-------------	---

The setting of this method is disabled in page mode. When this method is executed in page mode, the setting is reflected to the print after starting standard mode.

When **SII_MPM_ROTATE_90_TO_RIGHT** or **SII_MPM_ROTATE_90_TO_LEFT** is specified in **rotate**, the available print width of barcode or 2-dimensional barcode is max. 300 mm. When the value exceeds 300 mm, barcode or 2-dimensional barcode is not printed.

When the printer is reset, the setting in this method is back to the default value.

setLineSpacing	Specify line space amount
----------------	---------------------------

setLineSpacing	Specify line space amount
----------------	---------------------------

Specify the line spacing.

```
Syntax      - (BOOL) setLineSpacing: (NSInteger) lineSpacing
              error: (NSError**) error;
```

Parameter	lineSpacing	Line spacing (dot) The range is 0 to 255.
-----------	--------------------	--

error	Error object reference
--------------	------------------------

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .
--------------	--

YES	Normal
NO	Error

Description	The line spacing can be independently set in the standard mode and the page mode.
-------------	---

When the printer is reset, **lineSpacing** is set to 34.

Specify the character right space amount.

Syntax	- (BOOL) setCharacterRightSpace: (NSInteger) space error: (NSError**) error;	
Parameter	space	Right space amount (dot) The range is 0 to 255.
	error	Error object reference
Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .	
	YES	Normal
	NO	Error
Description	The right space amount can be independently set in the standard mode and the page mode.	
	This method is enabled for 1-byte characters and 2-byte characters. For 2-byte characters, the left space is set at 0.	
	When the printer is reset by reset or turned off, space is set to 0.	

Select the character set.

Syntax	- (BOOL) selectCharacterSet: (CharacterSet) charSet error: (NSError**) error;	
Parameter	charSet	Character set See "4.4.2(8) CharacterSet " for available settings.
Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .	
	YES	Normal
	NO	Error
Description	According to the language setting in iOS device, the default setting of the character set is as follows.	
	Japanese:	SII_MPM_CODEPAGE_KATAKANA
	Other than Japanese:	SII_MPM_CODEPAGE_1252
When this method is executed and then the printer is reset by reset or turned off, the setting in this method is enabled.		

Retrieve specified character set

Retrieves the specified character set.

Syntax - (NSInteger) **getCharacterSet**;

Return value	Character set
--------------	---------------

Description	For the available setting to retrieve, see "4.4.2(8) CharacterSet ".
-------------	---

Select international character set

Select the international character set.

```
Syntax      - (BOOL) selectInternationalCharacterSet:
               (InternationalCharacterSet) intCharSet
               error: (NSError**) error;
```

Parameter	<code>intCharSet</code>	International character set See "4.4.2(9) <code>InternationalCharacterSet</code> " for available settings.
-----------	-------------------------	---

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .
--------------	--

YES	Normal
NO	Error

Description	According to the language setting in iOS device, the default setting of the International character set is as follows.
-------------	--

Japanese: **SII_MPM_INT_CHAR_SET_JAPAN**
Other than Japanese: **SII_MPM_INT_CHAR_SET_USA**

When this method is executed and then the printer is reset by `reset` or turned off, the setting in this method is enabled.

Retrieve specified international character set

Retrieves the specified international character set.

Syntax - (NSInteger) **getInternationalCharacterSet**;

Return value	International character set
--------------	-----------------------------

Description	For the available setting to retrieve, see "4.4.2(9) InternationalCharacterSet ".
-------------	--

Set the character formatting.

Syntax	<pre> - (BOOL) setCharacterFormatting: (CharacterType) type verticalScale: (CharacterScale) verticalScale horizontalScale: (CharacterScale) horizontalScale underline: (Underline) underline bold: (Bold) bold reverse: (Reverse) reverse rotate: (Rotate) rotate error: (NSError**) error; </pre>	
Parameter	type	Character font See "4.4.2(10) CharacterType " for available settings.
	verticalScale	Character size (in vertical direction) See "4.4.2(11) CharacterScale " for available settings.
	horizontalScale	Character size (in horizontal direction) See "4.4.2(11) CharacterScale " for available settings.
	underline	Underline See "4.4.2(12) Underline " for available settings.
	bold	Bold print See "4.4.2(13) Bold " for available settings.
	reverse	Reverse print See "4.4.2(14) Reverse " for available settings.
	rotate	Character Rotation Print In page mode, the setting in <i>rotate</i> is disabled. When this method is executed in page mode, the setting is reflected to the print after starting standard mode. In standard mode, when the print data remains in the printer, this method is not executed. Execute this method after the printing is completed. In standard mode, when SII_MPM_ROTATE_90_TO_RIGHT or SII_MPM_ROTATE_90_TO_LEFT is specified, the operation is as follows: <ul style="list-style-type: none"> • Underline print is not performed. • the scale of height and width in verticalScale and horizontalScale are reversed. See "4.4.2(15) Rotate " for available settings.
	error	Error object reference
Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .	
	YES	Normal
	NO	Error
Description	When the printer is reset, the setting in this method back to the default value.	

Send text data

Syntax

```
- (BOOL) printText: (NSString*) text
           error: (NSError**) error;
```

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see <code>NSError</code> object specified by <code>error</code> .
--------------	--

YES	Normal
NO	Error

Based on the setting in **selectCharacterSet** and **selectInternationalCharacterSet**, printer commands "Character Code Table Select", "International Character Select", "Kanji Code System Selection", and "Kanji Mode Cancel" are added to the send data as the header.

For the details of printer commands, see "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE".

A maximum of 16 KB (16384 bytes) of data size can be specified.

When `controlTransaction` is not used, the timeout period specified in `setWriteTimeout` is valid.

This method is aborted by **reset**.

Print logo registered in printer

Syntax

- (BOOL) **printLogo:** (NSInteger) regNum
error: (NSError**) error;

error	Error object reference
--------------	------------------------

YES	Normal
NO	Error

When the specified logo is not registered in **regNum**, this method is ignored.

Sends the file data to the printer.

The method of syntax (a), dithering can be specified.

The method of syntax (b), dithering is fixed to be enabled.

Syntax (a)- (BOOL) **sendDataFile:** (NSString*) filePath
dithering: (Dithering) dithering
error: (NSError**) error;

(b)- (BOOL) **sendDataFile:** (NSString*) filePath
error: (NSError**) error;

Parameter	filePath	File path to send to the printer
	dithering	Dithering It is enabled when the extension of the file specified at <code>filePath</code> is .bmp, .jpg, .jpeg, or .png. See "4.4.2(3) Dithering" for available settings.
	error	Error object reference

Return value The following value may be thrown when an error occurs while calling this method.
When an error occurs, see **NSError** object specified by **error**.

YES Normal
NO Error

Description Depending on the specified file extension, the followings are processed.

- When the file extension is .bmp, .jpg, .jpeg, or .png:
The image data is converted to printable format for the printer and is sent to the printer.
The color image data is converted to monochrome image by binarization.
- When the file extension is .txt:
Text data format supports UTF-8.
This method sends the text data after encoding it to recognizable text data for the printer based on the character set specified in **selectCharacterSet**.
Based on the setting in **selectCharacterSet** and **selectInternationalCharacterSet**, printer commands "Character Code Table Select", "International Character Select", "Kanji Code System Selection", and "Kanji Mode Cancel" are added to the send data as the header.
For the details of printer commands, see "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE".
This method does not add any line feed code in the last of the text data.
- When the file extension is .bin, or .dat
The text data is sent to printer without conversion.
- When the file extension is htm, or .html
The text data is sent to printer without conversion.
Be sure to add an HTML end tag in the last of file data.

A maximum of 1 MB (1048576 bytes) of file size can be specified.

When **controlTransaction** is not used, the timeout period specified in **setWriteTimeout** is valid.

Do not include a printer command that initializes the printer other than the printer command "Initialize Printer" in the data to send. When perform Hardware Reset, use reset.
For printer initialization, see "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE".

This method is aborted by **reset**.

printBarcode

Print barcode

Prints the barcode.

Syntax

```
(a) - (BOOL) printBarcode: (TypeBarcode) type
      text: (NSString*) text
      moduleWidth: (ModuleWidthBarcode) moduleWidth
      moduleHeight: (NSInteger) moduleHeight
      hri: (HriPositionBarcode) hri
      nwRatio: (NwRatioBarcode) nwRatio
      error: (NSError**) error;

(b) - (BOOL) printBarcode: (TypeBarcode) type
      binary: (NSData*) binary
      moduleWidth: (ModuleWidthBarcode) moduleWidth
      moduleHeight: (NSInteger) moduleHeight
      hri: (HriPositionBarcode) hri
      nwRatio: (NwRatioBarcode) nwRatio
      error: (NSError**) error;
```

Parameter

type Barcode type
See "4.4.2(16) **TypeBarcode**" for available settings.

(a) **text** : Barcode text data
(b) **binary** : Barcode binary data

The available values in **text** and **binary** are as follows.

Barcode Type	Data Size	Barcode Data to Input
UPC-A	11 to 12 bytes	'0' to '9' (0x30 to 0x39)
UPC-E	11 to 12 bytes	'0' to '9' (0x30 to 0x39)
JAN13 (EAN13)	12 to 13 bytes	'0' to '9' (0x30 to 0x39)
JAN8 (EAN8)	7 to 8 bytes	'0' to '9' (0x30 to 0x39)
CODE39	1 to 150 bytes	' ' (0x20)
		'\$' (0x24)
		'%' (0x25)
		'+' (0x2B)
		'-' (0x2D)
		'.' (0x2E)
		'/' (0x2F)
		'0' to '9' (0x30 to 0x39)
		'A' to 'Z' (0x41 to 0x54)
ITF	2 to 15 bytes (Even number only)	'0' to '9' (0x30 to 0x39)

Barcode Type	Data Size	Barcode Data to Input
CODABAR	1 to 150 bytes	'\$' (0x24)
		'+' (0x2B)
		'-' (0x2D)
		':' (0x2E)
		'/' (0x2F)
		'0' to '9' (0x30 to 0x39)
		':' (0x3A)
		'A' to 'D' (0x41 to 0x44)
CODE93	1 to 150 bytes	(0x00 to 0x7F)
CODE128	2 to 150 bytes	(0x00 to 0x7F)*1
JAN13 (EAN13) add-on 2	14 to 15 bytes	'0' to '9' (0x30 to 0x39)
JAN13 (EAN13) add-on 5	17 to 18 bytes	'0' to '9' (0x30 to 0x39)
GS1 Databar Omni-directional	13 bytes	'0' to '9' (0x30 to 0x39)
GS1 Databar Truncated	13 bytes	'0' to '9' (0x30 to 0x39)
GS1 Databar Limited	13 bytes	'0' to '9' (0x30 to 0x39)
GS1 Databar Expanded	2 to 150 bytes	' ' to ' "' (0x20 to 0x22)
		'%' to '?' (0x25 to 0x3F)
		'A' to 'Z' (0x41 to 0x5A)
		'_' (0x5F)
		'a' to 'z' (0x61 to 0x7A)
		'{' (0x7B)

*1: The available barcode for input varies depending on the specified code set.

CODE A : 0x00 to 0x50

CODE B : 0x00 to 0x7F

CODE C : 2 digit numbers from 00 to 99 (0x00 to 0x63)

moduleWidth Barcode module width or fine element
See "4.4.2(17) **ModuleWidthBarcode**".

moduleHeight Barcode module height(dot)
See the following table for available settings.

Barcode Type	moduleHeight (dot)
UPC-A	0: Initial value (162 dots), 1 to 255
UPC-E	
JAN13 (EAN13)	
JAN8 (EAN8)	
CODE39	
ITF	
CODABAR	
CODE93	
CODE128	
JAN13 (EAN13) add-on 2	
JAN13 (EAN13) add-on 5	

Barcode Type	moduleHeight (dot)	
GS1 Databar Omni-directional	0: Initial value (162 dots)	66 to 255 ^{*1}
		99 to 255 ^{*2}
		132 to 255 ^{*3}
		165 to 255 ^{*4}
		198 to 255 ^{*5}
GS1 Databar Truncated	0: Initial value (162 dots)	26 to 255 ^{*1}
		39 to 255 ^{*2}
		52 to 255 ^{*3}
		65 to 255 ^{*4}
		78 to 255 ^{*5}
GS1 Databar Limited	0: Initial value (162 dots)	20 to 255 ^{*1}
		30 to 255 ^{*2}
		40 to 255 ^{*3}
		50 to 255 ^{*4}
		60 to 255 ^{*5}
GS1 Databar Expanded	0: Initial value (162 dots)	68 to 255 ^{*1}
		102 to 255 ^{*2}
		136 to 255 ^{*3}
		170 to 255 ^{*4}
		204 to 255 ^{*5}

*1: When `moduleWidth` is `SII_MPM_MODULE_WIDTH_BARCODE_2`.

*2: When `moduleWidth` is `SII_MPM_MODULE_WIDTH_BARCODE_3`.

*3: When `moduleWidth` is `SII_MPM_MODULE_WIDTH_BARCODE_4`.

*4: When `moduleWidth` is `SII_MPM_MODULE_WIDTH_BARCODE_5`.

*5: When `moduleWidth` is `SII_MPM_MODULE_WIDTH_BARCODE_6`.

hri Barcode HRI character
See "4.4.2(18) `HriPositionBarcode`" for available settings.

nwRatio Barcode N:W ratio
The available setting varies depending on the setting of **type**.
For the details, see "4.4.2(19) `NwRatioBarcode`".

error Error object reference

Return value The following value may be thrown when an error occurs while calling this method.
When an error occurs, see `NSError` object specified by **error**.

YES Normal
NO Error

Description In standard mode, when the print data remains in the printer, this method is not executed.
Execute this method after the printing is completed.

When the barcode width exceeds the print area, the barcode is not printed.

This method sends the text data specified in syntax (a) **text** after encoding it to recognizable text data for the printer.

The binary data specified in syntax (b) **binary** is sent to the printer as it is.

Special Codes specified in CODE128 are as follows.

Input Data	Special Code per Code Set		
	CODE A	CODE B	CODE C
'S' (0x7B, 0x53)	SHIFT	SHIFT	SHIFT
'A' (0x7B, 0x41)	-	CODE A	CODE A
'B' (0x7B, 0x42)	CODE B	-	CODE B
'C' (0x7B, 0x43)	CODE C	CODE C	-
'1' (0x7B, 0x31)	FNC1	FNC1	FNC1
'2' (0x7B, 0x32)	FNC2	FNC2	FNC2
'3' (0x7B, 0x33)	FNC3	FNC3	FNC3
'4' (0x7B, 0x34)	FNC4	FNC4	FNC4
'{' (0x7B, 0x7B)	-	'{'	-

Check digits for the following barcode are automatically calculated.

- UPC-A
- UPC-E
- JAN13 (EAN13)
- JAN8 (EAN8)
- JAN13 (EAN13) add-on 2
- JAN13 (EAN13) add-on 5
- GS1 Databar Omni-directional
- GS1 Databar Truncated
- GS1 Databar Limited

When the data including the check digit is specified for the following barcodes, the check digit is ignored and recalculated on the printer.

- UPC-A
- UPC-E
- JAN13 (EAN13)
- JAN8 (EAN8)

Specifying the start code and stop code (**) of CODE39 is not required since the codes are added automatically.

When odd number of data is specified in ITF barcode data, the last data is discarded.

In CODABAR barcode data, input 'A' to 'D' as the start code and stop code.

In GS1 Databar Expanded barcode data, use '{' only for specifying FNC1. When specify FNC1, input '{1'(0x7B, 0x31).

When specified value in any one of **text**, **binary**, **moduleWidth**, **moduleHeight**, or **nwRatio** is not corresponded to the barcode type specified in **type**, an error occurs.

When **controlTransaction** is not used, the timeout period specified in **setWriteTimeout** is valid.

Prints the 2-dimensional barcode.

Syntax (a) – (BOOL) **print2DCode:** (Type2DCode) type
 text: (NSString*) text
 mode: (Mode2Dcode) mode
 moduleSize: (ModuleSize2Dcode) moduleSize
 moduleHeight: (NSInteger) moduleHeight
 column: (NSInteger) column
 row: (NSInteger) row
 errorCorrect: (ErrorCorrect2Dcode) errorCorrect
 error: (NSError**) error;

(b) – (BOOL) **print2DCode:** (Type2DCode) type
 binary: (NSData*) binary
 mode: (Mode2Dcode) mode
 moduleSize: (ModuleSize2Dcode) moduleSize
 moduleHeight: (NSInteger) moduleHeight
 column: (NSInteger) column
 row: (NSInteger) row
 errorCorrect: (ErrorCorrect2Dcode) errorCorrect
 error: (NSError**) error;

Parameter	type	2-dimensional barcode type See "4.4.2(20) Type2DCode " for available settings. (a) text : Barcode text data (b) binary : Barcode binary data
	mode	2-dimensional barcode mode The available setting varies depending on the setting of type . For the details, see "4.4.2(21) Mode2Dcode ". When select SII_MPM_MODE_2DCODE_MAXI_CODE_2 , add the service class (3 digits), the country code (3 digits), and the postal code (9 digits) data in the beginning of text or binary . When select SII_MPM_MODE_2DCODE_MAXI_CODE_3 , add the service class (3 digits), the country code (3 digits), and the postal code (6 digits) data in the beginning of text or binary .
	moduleSize	2-dimensional barcode module size The available setting varies depending on the setting of type . For the details, see "4.4.2(22) ModuleSize2DCode ".
	moduleHeight	2-dimensional barcode module height (dot) moduleHeight is enabled in PDF417 and GS1 Databar Stacked Omni-directional. <ul style="list-style-type: none"> • PDF417 Specifies the row height of PDF. The valid range is 2 to 127. • GS1 Databar Stacked Omni-directional Specifies the height of 1 row. The valid range is 33 to 255.

column	<p>Number of columns in 2-dimensional barcode</p> <p>column is enabled in PDF417 and GS1 Databar Expanded Stacked.</p> <ul style="list-style-type: none"> • PDF417 <ul style="list-style-type: none"> Specifies the number of columns in the data area. The valid range is 0 to 30. When 0 is specified, the number of column is set automatically. • GS1 Databar Stacked Expanded <ul style="list-style-type: none"> Specifies an even number of columns per line. The valid range is 2 to 20.
row	<p>Number of rows in 2-dimensional barcode</p> <p>row is enabled in PDF417 only. The valid range is 0, and 3 to 90. When 0 is specified, the number of row is set automatically.</p>
errorCorrect	<p>Error correction level of 2-dimensional barcode</p> <p>The available setting varies depending on the setting of type. For the details, see "4.4.2(23) ErrorCorrect2DCode".</p>
error	Error object reference
Return value	<p>The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error.</p> <p>YES Normal NO Error</p>
Description	<p>In standard mode, when the print data remains in the printer, this method is not executed. Execute this method after the printing is completed.</p> <p>This method sends the text data specified in syntax (a) text after encoding it to recognizable text data for the printer.</p> <p>In text, input the corresponded character data in ASCII style, according to the standard 2-dimensional barcode type specified in type.</p> <p>The binary data specified in syntax (b) binary is sent to the printer as it is.</p> <p>In binary, input the corresponded character data in ASCII style character code, according to the standard 2-dimensional barcode type specified in type.</p> <p>When specified value in any one of text, binary, mode, moduleSize, moduleHeight, column, or errorCorrect is not corresponded to the 2-dimensional barcode type specified in type, an error occurs.</p> <p>When the 2-dimensional barcode width exceeds the print area width, this method is ignored.</p> <p>When controlTransaction is not used, the timeout period specified in setWriteTimeout is valid.</p>

Draws a rectangle in page mode.

```
Syntax      - (BOOL) printPageModeRectangle: (NSInteger) startX
              startY: (NSInteger) startY
              width: (NSInteger) width
              height: (NSInteger) height
              thickness: (NSInteger) thickness
              error: (NSError**) error;
```

Parameter	startX	Horizontal start point (dot) The range is 0 to 2395.
	startY	Vertical start point (dot) The range is 0 to 2395.
	width	Width (dot) The range is 4 to 2400.
	height	Height (dot) The range is 4 to 2400.
	thickness	Line width (dot) The range is 2 to 40.
	error	Error object reference

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see <code>NSError</code> object specified by <code>error</code> .
--------------	--

YES	Normal
NO	Error

Description	Do not execute this method in standard mode.
-------------	--

The start point varies depending on the print direction in page mode specified in **direction** of **selectPageMode**.
For the details of print direction and start point, see "4.4.2(6) **Direction**".

When the setting in **startX**, **startY**, **width**, or **height** exceeds the print area in page mode specified in **selectPageMode**, the exceeded area in print area is not drawn.

In this method, the printer command "Ruled Line OFF" and "Ruled Line Buffer Clear" are sent, and the ruled line is changed to OFF and ruled line buffer is cleared. For the details of printer command, see "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE".

Feeds the paper by line.

```
Syntax      - (BOOL) feedLine: (NSInteger) lines
              error: (NSError**) error;
```

Parameter	lines	Number of lines to feed (line) The range is 0 to 255.
	error	Error object reference

Return value The following value may be thrown when an error occurs while calling this method.
When an error occurs, see **NSError** object specified by **error**.

YES Normal
NO Error

Description In standard mode, feeds the paper by the specified number of lines.
When data exists in the line buffer of the printer, paper feed is performed after printing 1 line.
In page mode, the vertical data mapping starting position is shifted by the specified number of lines.

The paper feed length for 1 line (line feed space) can be specified in **setLineSpacing**.

feedDotLine

Feed paper by dot

Feed the paper by dot.

Syntax - (BOOL) **feedDotLine:** (NSInteger) dotLines
error: (NSError**) error;

Parameter **dotLines** Number of dots to feed (dot)
In the standard mode, the range is -48 to 8192.
In page mode, the range is 0 to 8192.
When the specified value is within -48 to -1, this method is ignored.

error Error object reference

Return value The following value may be thrown when an error occurs while calling this method.
When an error occurs, see **NSError** object specified by **error**.

YES Normal
NO Error

Description In standard mode, feeds the paper by the specified number of dots.
When data exists in the line buffer of the printer, paper feed is performed after printing 1 line.
In page mode, the vertical data mapping starting point is shifted by the specified number of dots.

feedCutPosition

Feed paper to cut position

Feeds the paper to the paper cut position.

Syntax - (BOOL) **feedCutPosition:** (NSError**) error;

Parameter **error** Error object reference

Return value The following value may be thrown when an error occurs while calling this method.
When an error occurs, see **NSError** object specified by **error**.

YES Normal
NO Error

Description In standard mode, when the print data remains in the printer, this method is not executed.
Execute this method after the printing is completed.

Performs the marked paper form feed and the form feed position correct.

```
Syntax      - (BOOL) feedMarkPosition: (NSInteger) dotLines
              error: (NSError**) error;
```

Parameter	dotLines	Correction amount (dot) The range is -48 to 255. When correction is not needed, specify 0.
-----------	-----------------	--

error	Error object reference
--------------	------------------------

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .
--------------	--

YES	Normal
NO	Error

Description	In standard mode, when the print data remains in the printer, this method is not executed. Execute this method after the printing is completed.
-------------	---

This method is effective only when marked paper is selected.
See "MP-A40 SERIES THERMAL PRINTER TECHNICAL REFERENCE" for details about how to use the marked paper.

Specify the log output.

```
Syntax      - (BOOL) setLog: (NSInteger) logLevel
              logFileSize: (LogFileSize) logFileSize
              error: (NSError**) error;
```

Parameter	<code>logLevel</code>	Log output level Specify 0. When other than 0 is specified, the contents of output log is not guaranteed.
-----------	-----------------------	--

logFileSize	Maximum size of log file See "4.4.2(24) LogFileSize" for the available setting.
--------------------	--

error	Error object reference
--------------	------------------------

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see NSError object specified by error .
--------------	--

YES	Normal
NO	Error

Description	Log file is saved as a local file of iOS application with programmed this library.
-------------	--

Log file name: PrinterManager.log.x (x range is 0 to 4)

First of all, the log file is created called PrinterManager.log.0.
When the file size exceeds the maximum size of the log file, changes the file name to PrinterManager.log.1, and creates the new file called PrinterManager.log.0.
The number of created file is up to 5.

- **Public Property**

isOpened

Retrieve printer using status

Retrieves that the printer's open status by **open**.

Syntax @property(readonly) BOOL **isOpened**;

Parameter **isOpened** Using printer

Return value YES Using printer is started
 NO Using printer is not started.

(2) SIIMpaPrinterStatus

• Summary

This class stores the printer status.

This class provides following functions.

Public Properties

Method	Function Summary
errOffline	Retrieve offline error status
errHardware	Retrieve hardware error status
errVoltage	Retrieve Vp Voltage error status
errHeadTemperature	Retrieve head temperature error status
errOutOfPaper	Retrieve out-of-paper error status
errMarkPaperJam	Retrieve paper jam error status while detecting marked paper.
errCoverOpen	Retrieve paper cover open error status
errBattery	Retrieve battery error status
stateFeedSwitch	Retrieve feed switch status
statePaperFeed	Retrieve paper feed status
stateReturnWaiting	Retrieve return waiting status
stateFlashMemoryRewriting	Retrieve FLASH memory rewrite status
stateBattery	Retrieve battery voltage status

• Public Properties

errOffline	Retrieve offline error status
-------------------	--------------------------------------

Retrieves the offline error status.

Syntax @property(readonly) BOOL **errOffline**;

Return value YES Offline error
 NO Online

errHardware	Retrieve hardware error status
--------------------	---------------------------------------

Retrieves the hardware error status.

Syntax @property(readonly) BOOL **errHardware**;

Return value YES error
 NO OK

errVoltage**Retrieve Vp Voltage error status**

Retrieves the Vp Voltage error status.

Syntax @property(readonly) BOOL **errVoltage**;

Return value	YES	error
	NO	OK

errHeadTemperature**Retrieve head temperature error status**

Retrieves the head temperature error status.

Syntax @property(readonly) BOOL **errHeadTemperature**;

Return value	YES	error
	NO	OK

errOutOfPaper**Retrieve out-of-paper error status**

Retrieves the out-of-paper error status.

Syntax @property(readonly) BOOL **errOutOfPaper**;

Return value	YES	error
	NO	OK

errMarkPaperJam**Retrieve paper jam error status while detecting marked paper.**

Retrieves the paper jam error status while detecting marked paper.

Syntax @property(readonly) BOOL **errMarkPaperJam**;

Return value	YES	error
	NO	OK

errCoverOpen**Retrieve paper cover open error status**

Retrieves the paper cover open error status.

Syntax @property(readonly) BOOL **errCoverOpen**;

Return value	YES	error
	NO	OK

errBattery**Retrieve battery error status**

Retrieves the battery error status.

Syntax @property(readonly) BOOL **errBattery**;

Return value	YES	error
	NO	OK

Retrieves the feed switch status.

Syntax `@property(readonly) BOOL stateFeedSwitch;`

Return value	YES	ON
	NO	OFF

Retrieves the paper feed status.

Syntax `@property(readonly) BOOL statePaperFeed;`

Return value	YES	Feeding
	NO	Stopped

Retrieves the return waiting status.

Syntax `@property(readonly) BOOL stateReturnWaiting;`

Return value	YES	In return waiting status
	NO	Not in return waiting status

Retrieves the FLASH memory rewrite status.

Syntax `@property(readonly) BOOL stateFlashMemoryRewriting;`

Return value	YES	In rewrite status
	NO	Not in rewrite status

Retrieves the battery voltage status.

Syntax `@property(readonly) NSInteger stateBattery;`

Return value	0	No battery
	1	Battery remaining capacity level 4 or 5 (Need to charge or battery remaining capacity is 0%)
	2	Battery remaining capacity level 3 (battery remaining capacity: approx. 10%)
	3	Battery remaining capacity level 2 (battery remaining capacity: approx. 40%)
	4	Battery remaining capacity level 1 (battery remaining capacity: approx. 80%)

(3) SIIMpaPrinterDiscovery

- **Summary**

This class provides printer search functions.
This class provides the following functions.

Public Methods

Method	Function Summary
<code>startDiscoveryPrinter</code>	Start printer search
<code>cancelDiscoveryPrinter</code>	Cancel printer search
<code>getFoundPrinter</code>	Retrieve information list of searched printer

Constants used when retrieving the events are shown in the following table.

Constants

Method	Function Summary
SII_MPM_EVENT_FINISHED_DISCOVERY	Finish printer search Value = 0
SII_MPM_EVENT_CANCELED_DISCOVERY	Cancel printer search Value = 1

• Public Methods

```
startDiscoveryPrinter Start printer search
```

Starts the printer search.

```
Syntax      - (BOOL) startDiscoveryPrinter: (SEL) method
              target: (NSObject*) target
              prnIf: (PrinterInterface) prnIf
              retry: (NSInteger) retry
              timeout: (NSInteger) timeout
              error: (NSError**) error;
```

Parameter	method	Specification of selector Specify the selector of method to execute when the printer search is finished or the search is canceled by cancelDiscoveryPrinter . The sample of execution method by the callback is follows.
-----------	---------------	---

```
- (void)onDiscoveryFinished:(NSNumber *)event;
```

When this method is called by search finish,
SII_MPM_EVENT_FINISHED_DISCOVERY is assigned to `event`.
When this method is called by search cancel,
SII_MPM_EVENT_CANCELED_DISCOVERY is assigned to
`event`.

target	Specification of object Specify the object including the method specified by method .
---------------	---

prnIf Constants of communication interface
See "4.4.2(1) **PrinterInterface**" for the available setting.

retry	<p>Number of retry times (time)</p> <p>The performance varies depending on the setting of prnIf.</p> <ul style="list-style-type: none"> When SII_MPM_PRN_IF_TCP is specified: Sends local broadcast packet as much as the specified times in retry. The range is 1 to 5. When the specified value is below 1, the value is processed as 1. When the specified value exceeds 5, the value is processed as 5. When SII_MPM_PRN_IF_BT is specified: The specified value is ignored, and the search is performed 1 time only.
timeout	<p>Timeout period for 1 time search</p> <p>The performance varies depending on the setting of prnIf.</p> <ul style="list-style-type: none"> When SII_MPM_PRN_IF_TCP is specified: Every time of sending local broadcast packet, wait for a response from the printer until the time specified by timeout. The range is 3 to 60. When the specified value is below 3, the value is processed as 3. When the specified value exceeds 60, the value is processed as 60. When SII_MPM_PRN_IF_BT is specified: The specified value is ignored.
error	Error object reference
Return value	<p>The following value may be thrown when an error occurs while calling this method.</p> <p>When an error occurs, see NSError object specified by error.</p> <p>YES Normal NO Error</p>
Description	<p>Cancel is available by cancelDiscoveryPrinter.</p> <p>Retrieve the search result by getFoundPrinter.</p>

cancelDiscoveryPrinter

Cancel printer search

Cancels the printer search started by **startDiscoveryPrinter**.

Syntax	- (BOOL) cancelDiscoveryPrinter : (NSError**) error
Parameter	error Error object reference
Return value	<p>The following value may be thrown when an error occurs while calling this method.</p> <p>When an error occurs, see NSError object specified by error.</p> <p>YES Normal NO Error</p>
Description	<p>When the search is canceled, the method specified in method of startDiscoveryPrinter is executed.</p> <p>The search result by cancellation can be retrieved by getFoundPrinter.</p>

Retrieves all the printer information searched by `startDiscoveryPrinter`.

```
Syntax      - (BOOL) getFoundPrinter: (NSMutableArray**) foundPrinter
              error: (NSError**) error
```

Parameter	error	Error object reference
-----------	--------------	------------------------

Return value	The following value may be thrown when an error occurs while calling this method. When an error occurs, see <code>NSError</code> object specified by <code>error</code> .
--------------	--

YES	Normal
NO	Error

Description	Retrieves the searched printer information by NSMutableArray . Stores each of the printer information in SIIMpaDiscoveryPrinter class. By property of SIIMpaDiscoveredPrinter class, the printer model name, Bluetooth address, IP address, MAC address and serial number can be retrieved. For the property of SIIMpaDiscoveredPrinter class, see "4.4.1(4) SIIMpaDiscoveredPrinter ".
-------------	--

(4) **SIIMpaDiscoveredPrinter**

• **Summary**

This class stores the printer information searched by **startDiscoveryPrinter**. By the printer information searched, the printer model name, Bluetooth address, IP address, MAC address and serial number can be retrieved.

This class provides the following functions.

Public Properties

Property	Function Summary
printerModel	Retrieve printer model name
bluetoothAddress	Retrieve Bluetooth address
ipAddress	Retrieve IP address
macAddress	Retrieve MAC address
serialNumber	Retrieve serial number

• **Public Properties**

printerModel	Retrieve printer model name
---------------------	-----------------------------

Retrieves the character string of printer model name.

Syntax @property(readonly) NSString ***printerModel**;

Return value Printer model name

bluetoothAddress	Retrieve Bluetooth address
-------------------------	----------------------------

Retrieves the character string of Bluetooth address.

Syntax @property(readonly) NSString ***bluetoothAddress**;

Return value Bluetooth address

ipAddress	Retrieve IP address
------------------	---------------------

Retrieves the character string of IP address.

Syntax @property(readonly) NSString ***ipAddress**;

Return value IP address

macAddress	Retrieve MAC address
-------------------	----------------------

Retrieves the character string of MAC address.

Syntax @property(readonly) NSString ***macAddress**;

Return value MAC address

Retrieves the character string of Serial Number.

Syntax @property (readonly) NSString ***serialNumber**;

Return value Serial Number

4.4.2 Enumerated Type (Enum)

(1) `PrinterInterface`

Enumerator used for specifying the communication interface of `open`.

Constant Name	Description
<code>SII_MPM_PRN_IF_TCP</code>	TCP/IP
<code>SII_MPM_PRN_IF_BT</code>	Bluetooth

(2) `PrinterModel`

Enumerator used for specifying the printer model of `open`.

Constant Name	Description
<code>SII_MPM_PRN_MODEL_MP_A40</code>	MP-A40

(3) `Dithering`

Enumerator used for dithering of `resisterLogo` and `sendDataFile`.

Constant Name	Description
<code>SII_MPM_DITHERING_DISABLE</code>	Dithering is disabled
<code>SII_MPM_DITHERING_ERRORDIFFUSION</code>	Dithering is enabled

(4) `PrinterInformation`

Enumerator used for specifying the printer information of `getPrinterInformation`, `getPrinterInformationNumber` and `getPrinterInformationString`.
See "MP-A40 THERMAL PRINTER TECHNICAL REFERENCE" for details of printer information to retrieve.

Constant Name	Description (Printer Information)
<code>SII_MPM_GET_NV_MEM_CAP</code>	NV graphics memory capacity
<code>SII_MPM_GET_NV_MEM_REM_CAP</code>	NV graphics memory remaining capacity
<code>SII_MPM_GET_NV_MEM_KEYCODE_LIST</code>	NV graphics key code list
<code>SII_MPM_GET_REM_USER_MEM_CAP_DEFRAG</code>	Remaining user area after defragment
<code>SII_MPM_GET_REM_USER_MEM_CAP</code>	Remaining user area
<code>SII_MPM_GET_FUNC_SET_RESP</code>	Function setting response
<code>SII_MPM_GET_PRN_ID_MODEL</code>	Printer ID send (Model ID)
<code>SII_MPM_GET_PRN_ID_TYPE</code>	Printer ID send (Type ID)
<code>SII_MPM_GET_PRN_ID_ROM_VER</code>	Printer ID send (ROM version ID)
<code>SII_MPM_GET_PRN_ID_FIRM_VER_MAIN</code>	Printer ID send (Firmware version (main))
<code>SII_MPM_GET_PRN_ID_MFR</code>	Printer ID send (Manufacturer)
<code>SII_MPM_GET_PRN_ID_MODEL_NAME</code>	Printer ID send (Model name)
<code>SII_MPM_GET_PRN_ID_FIRM_VER_BOOT</code>	Printer ID send (Firmware version (boot))
<code>SII_MPM_GET_PRN_ID_FIRM_CHECKSUM_BOOT</code>	Printer ID send (Firmware checksum (boot))

Constant Name	Description (Printer Information)
SII_MPM_GET_PRN_ID_FIRM_CHECKSUM_MAIN	Printer ID send (Firmware checksum (main))
SII_MPM_GET_PRN_ID_FIRM_CHECKSUM	Printer ID send (Firmware checksum (main+boot))
SII_MPM_GET_MAINT_NUM_FEED_LINE	Maintenance counter (Paper feed line count (in 100 dot-lines))
SII_MPM_GET_MAINT_NUM_HEAD_ACTIVE	Maintenance counter (Number of thermal head activation times (in 100 dot-lines))
SII_MPM_GET_MAINT_DRIVE_TIME	Maintenance counter (Drive time of printer mechanism (minute))
SII_MPM_GET_MAINT_NUM_FEED_LINE_INTEGRATION	Maintenance counter (Paper feed line count (in 100 dot-lines) (integrated value))
SII_MPM_GET_MAINT_NUM_HEAD_ACTIVE_INTEGRATION	Maintenance counter (Number of thermal head activation times (in 100 dot-lines) (integration))
SII_MPM_GET_MAINT_DRIVE_TIME_INTEGRATION	Maintenance counter (Drive time of printer mechanism (minute) (integration))
SII_MPM_GET_HFONT_24_CHECKSUM	1-byte font ID send (24 dots font, checksum)
SII_MPM_GET_HFONT_24_ID	1-byte font ID send (24 dots font, ID)
SII_MPM_GET_HFONT_24_INT_CHAR	1-byte font ID send (24 dots font, registered international character)
SII_MPM_GET_HFONT_16_CHECKSUM	1-byte font ID send (16 dots font, checksum)
SII_MPM_GET_HFONT_16_ID	1-byte font ID send (16 dots font, ID)
SII_MPM_GET_HFONT_16_INT_CHAR	1-byte font ID send (16 dots font, registered international character)
SII_MPM_GET_FFONT_LANG	2-byte font ID send (Language)
SII_MPM_GET_FFONT_STANDARD	2-byte font ID send (Standard)
SII_MPM_GET_FFONT_COMPANY	2-byte font ID send (Company name)
SII_MPM_GET_FFONT_CHECKSUM	2-byte font ID send (Checksum)
SII_MPM_GET_FFONT_DATA_SIZE	2-byte font ID send (Data size)
SII_MPM_GET_FFONT_ROM_ID	2-byte font ID send (ROMID)

(5) **TransactionFunction**

Enumerator used for specifying the batch process control method of **controlTransaction**.

Constant Name	Description
SII_MPM_TRANSACTION_CLEAR	Interrupt batch process
SII_MPM_TRANSACTION_START	Begin batch process
SII_MPM_TRANSACTION_PRINT	End batch print and batch process

(6) Direction

Enumerator used for specifying the print direction of `selectPageMode`. The default value is shown by the shaded enumerated value in the following table.

When the start point is "top left" or "bottom right", the printer maps the print data in a vertical direction to the paper feed direction.

When the start point is "top right" or "bottom left", the printer maps the print data in a parallel direction to the paper feed direction.

Constant Name	Description
SII_MPM_DIRECTION_LEFT_TO_RIGHT	Print direction: left to right, Start point: top left (Figure 4-2 A)
SII_MPM_DIRECTION_BOTTOM_TO_TOP	Print direction: bottom to top, Start point: bottom left (Figure 4-2 B)
SII_MPM_DIRECTION_RIGHT_TO_LEFT	Print direction: right to left, Start point: bottom right (Figure 4-2 C)
SII_MPM_DIRECTION_TOP_TO_BOTTOM	Print direction: top to bottom, Start point: top right (Figure 4-2 D)

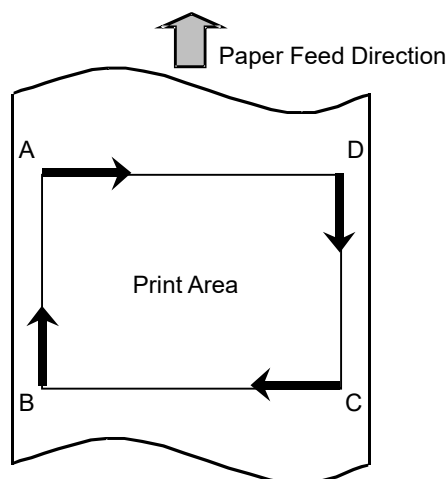 


Figure 4-2

(7) Alignment

Enumerator used for specifying the print position of `setStandardModeAlignment`. The default value is shown by the shaded enumerated value in the following table.

Constant Name	Description
SII_MPM_ALIGN_LEFT	Left aligned
SII_MPM_ALIGN_CENTER	Centered
SII_MPM_ALIGN_RIGHT	Right aligned

(8) CharacterSet

Enumerator used for specifying the character set of `selectCharacterSet` and `getCharacterSet`.
The default value varies depending on the language setting of iOS device.

Japanese:

SII_MPM_CODEPAGE_KATAKANA

Other than Japanese:

SII_MPM_CODEPAGE_1252

Constant Name	Description
SII_MPM_CODEPAGE_437	USA, Standard Europe (Code Page 437)
SII_MPM_CODEPAGE_KATAKANA	Katakana
SII_MPM_CODEPAGE_850	Multilingual (Code Page 850)
SII_MPM_CODEPAGE_860	Portuguese (Code Page 860)
SII_MPM_CODEPAGE_863	Canadian-French (Code Page 863)
SII_MPM_CODEPAGE_865	Nordic (Code Page 865)
SII_MPM_CODEPAGE_857^{*1}	Turkish (Code Page 857)
SII_MPM_CODEPAGE_737	Greek (Code Page 737)
SII_MPM_CODEPAGE_1252	Latin (Code Page 1252)
SII_MPM_CODEPAGE_866	Russian (Code Page 866)
SII_MPM_CODEPAGE_852	Eastern Europe (Code Page 852)
SII_MPM_CODEPAGE_858	Euro (Code Page 858)
SII_MPM_CODEPAGE_855	Cyrillic (Code Page 855)
SII_MPM_CODEPAGE_864^{*1}	Arabic (Code Page 864)
SII_MPM_CODEPAGE_1250	Central European (Code Page 1250)
SII_MPM_CODEPAGE_1251	Cyrillic (Code Page 1251)
SII_MPM_CODEPAGE_1253^{*2}	Greek (Code Page 1253)
SII_MPM_CODEPAGE_1254	Turkish (Code Page 1254)

*1: 20ACh of the Unicode cannot be printed.

*2: 00AAh of the Unicode cannot be printed.

(9) `InternationalCharacterSet`

Enumerator used for specifying the international character set of `selectInternationalCharacterSet` and `getInternationalCharacter`. The default value varies depending on the language setting of iOS device.

Japanese: `SII_MPM_INT_CHAR_SET_JAPAN`
Other than Japanese: `SII_MPM_INT_CHAR_SET_USA`

Constant Name	Description
<code>SII_MPM_INT_CHAR_SET_USA</code>	USA
<code>SII_MPM_INT_CHAR_SET_FRANCE</code>	France
<code>SII_MPM_INT_CHAR_SET_GERMANY</code>	Germany
<code>SII_MPM_INT_CHAR_SET_UNITED_KINGDOM</code>	United Kingdom
<code>SII_MPM_INT_CHAR_SET_DENMARK_1</code>	Denmark
<code>SII_MPM_INT_CHAR_SET_SWEDEN</code>	Sweden
<code>SII_MPM_INT_CHAR_SET_ITALY</code>	Italy
<code>SII_MPM_INT_CHAR_SET_SPAIN_1</code>	Spain I
<code>SII_MPM_INT_CHAR_SET_JAPAN</code>	Japan
<code>SII_MPM_INT_CHAR_SET_NORWAY</code>	Norway
<code>SII_MPM_INT_CHAR_SET_DENMARK_2</code>	Denmark II
<code>SII_MPM_INT_CHAR_SET_SPAIN_2</code>	Spain II
<code>SII_MPM_INT_CHAR_SET_LATIN_AMERICA</code>	Latin America
<code>SII_MPM_INT_CHAR_SET_ARABIA</code>	Arabia

(10) `CharacterType`

Enumerator used for specifying the character font of `setCharacterFormatting`. The default value is shown by the shaded enumerated value in the following table.

Constant Name	Description
<code>SII_MPM_CHAR_TYPE_FONT_CURRENT</code> ^{*1}	Current Setting (without sending the setting printer command)
<code>SII_MPM_CHAR_TYPE_FONT_A</code>	Font A (24 × 12), Kanji font A (24 × 24)
<code>SII_MPM_CHAR_TYPE_FONT_B</code> ^{*1}	Font B (16 × 8), Kanji font B (16 × 16)

^{*1}: When `SII_MPM_CODEPAGE_864` is selected in `selectCharacterSet`, the text is printed in FontA (24 × 12) regardless of specifying the character font in `setCharacterFormatting`.

(11) CharacterScale

Enumerator used for specifying the character scale of **setCharacterFormatting**. The default value is shown by the shaded enumerated value in the following table.

Constant Name	Description
SII_MPM_CHAR_SCALE_CURRENT	Current Setting (without sending the setting printer command)
SII_MPM_CHAR_SCALE_X1	× 1 (Standard)
SII_MPM_CHAR_SCALE_X2	× 2 (double)
SII_MPM_CHAR_SCALE_X3	× 3 (triple)
SII_MPM_CHAR_SCALE_X4	× 4 (quadruple)
SII_MPM_CHAR_SCALE_X5	× 5 (quintuple)
SII_MPM_CHAR_SCALE_X6	× 6 (sextuple)
SII_MPM_CHAR_SCALE_X7	× 7 (septuple)
SII_MPM_CHAR_SCALE_X8	× 8 (octuple)

(12) Underline

Enumerator used for specifying the underline of **setCharacterFormatting**. The default value is shown by the shaded enumerated value in the following table.

Constant Name	Description
SII_MPM_CHAR_UNDERLINE_CURRENT	Current Setting (without sending the setting printer command)
SII_MPM_CHAR_UNDERLINE_NONE	No underline
SII_MPM_CHAR_UNDERLINE_1DOT	Specify 1 dot width underline
SII_MPM_CHAR_UNDERLINE_2DOT	Specify 2 dots width underline

(13) Bold

Enumerator used for specifying the bold print of **setCharacterFormatting**. The default value is shown by the shaded enumerated value in the following table.

Constant Name	Description
SII_MPM_CHAR_BOLD_CURRENT	Current Setting (without sending the setting printer command)
SII_MPM_CHAR_BOLD_OFF	No bold print
SII_MPM_CHAR_BOLD_ON	Specify bold print

(14) Reverse

Enumerator used for specifying the reverse print of **setCharacterFormatting**. The default value is shown by the shaded enumerated value in the following table.

Constant Name	Description
SII_MPM_CHAR_REVERSE_CURRENT	Current Setting (without sending the setting printer command)
SII_MPM_CHAR_REVERSE_OFF	No reverse print
SII_MPM_CHAR_REVERSE_ON	Specify reverse print

(15) Rotate

Enumerator used for specifying the character rotation print of `setCharacterFormatting`, and for specifying print barcode direction of `setStandardModeBarcodeDirection`. The default value is shown by the shaded enumerated value in the following table.

When the character rotation print is specified `setCharacterFormatting`, the print position is changed. The print position and direction of text is shown in the Figure 4-3, Figure 4-4, Figure 4-5 and Figure 4-6.

Constant Name	Description
SII_MPM_ROTATE_CURRENT	Current Setting (without sending the setting printer command)
SII_MPM_ROTATE_NONE	No rotation
SII_MPM_ROTATE_90_TO_RIGHT	Rotate 90 degrees to right
SII_MPM_ROTATE_180	Rotate 180 degrees
SII_MPM_ROTATE_90_TO_LEFT	Rotate 90 degrees to left

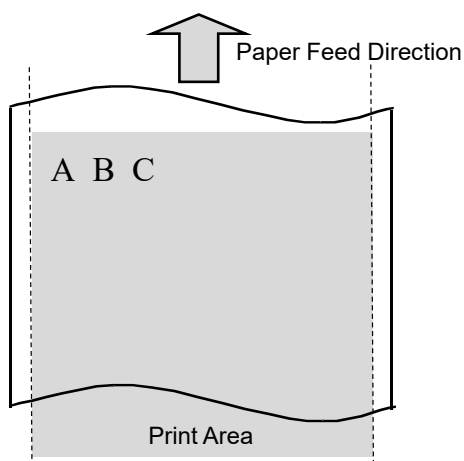 


Figure 4-3 No rotation

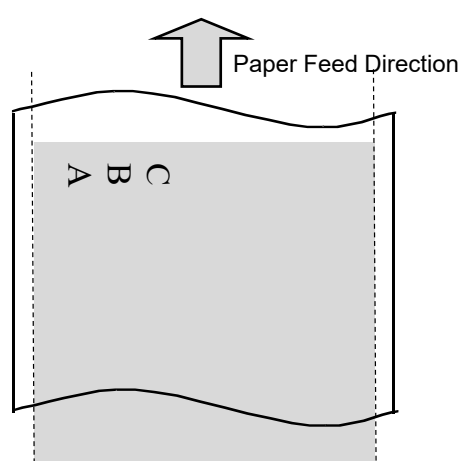 


Figure 4-4 Rotate 90 degrees to right

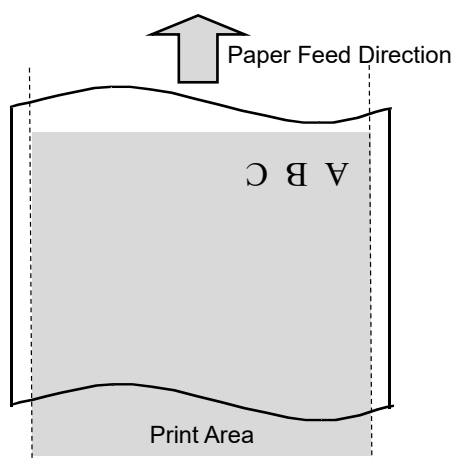 


Figure 4-5 Rotate 180 degrees

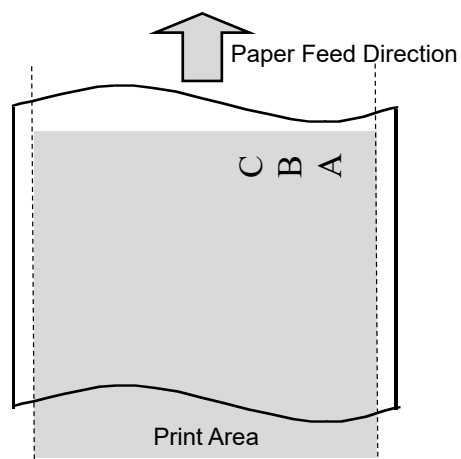 


Figure 4-6 Rotate 90 degrees to left

(16) **TypeBarcode**

Enumerator used for specifying the barcode type of **printBarcode**.

Constant Name	Description	
SII_MPM_TYPE_BARCODE_UPC_A	UPC-A	Multilevel barcode
SII_MPM_TYPE_BARCODE_UPC_E	UPC-E	Multilevel barcode
SII_MPM_TYPE_BARCODE_JAN13	JAN13 (EAN13)	Multilevel barcode
SII_MPM_TYPE_BARCODE_JAN8	JAN8 (EAN8)	Multilevel barcode
SII_MPM_TYPE_BARCODE_CODE39	CODE39	Binary level barcode
SII_MPM_TYPE_BARCODE_ITF	ITF	Binary level barcode
SII_MPM_TYPE_BARCODE_CODABAR	CODABAR	Binary level barcode
SII_MPM_TYPE_BARCODE_CODE128	CODE128	Multilevel barcode
SII_MPM_TYPE_BARCODE_CODE93	CODE93	Multilevel barcode
SII_MPM_TYPE_BARCODE_JAN13_ADDON2	JAN13 (EAN13) add-on 2	Multilevel barcode
SII_MPM_TYPE_BARCODE_JAN13_ADDON5	JAN13 (EAN13) add-on 5	Multilevel barcode
SII_MPM_TYPE_BARCODE_GS1_OMNI_DIRECTIONAL	GS1 Databar Omni-directional	Multilevel barcode
SII_MPM_TYPE_BARCODE_GS1_TRUNCATED	GS1 Databar Truncated	Multilevel barcode
SII_MPM_TYPE_BARCODE_GS1_LIMITED	GS1 Databar Limited	Multilevel barcode
SII_MPM_TYPE_BARCODE_GS1_EXPANDED	GS1 Databar Expanded	Multilevel barcode

(17) **ModuleWidthBarcode**

Enumerator used for specifying the barcode module width or narrow element of **printBarcode**.

Constant Name	Description
SII_MPM_MODULE_WIDTH_BARCODE_2	2 dots
SII_MPM_MODULE_WIDTH_BARCODE_3	3 dots
SII_MPM_MODULE_WIDTH_BARCODE_4	4 dots
SII_MPM_MODULE_WIDTH_BARCODE_5	5 dots
SII_MPM_MODULE_WIDTH_BARCODE_6	6 dots

(18) **HriPositionBarcode**

Enumerator used for specifying the barcode HRI characters of **printBarcode**.

Constant Name	Description
SII_MPM_HRI_BARCODE_NONE	No HRI character
SII_MPM_HRI_BARCODE_TOP_FONT_A	Above barcode (font A)
SII_MPM_HRI_BARCODE_BOTTOM_FONT_A	Below barcode (font A)
SII_MPM_HRI_BARCODE_FONT_A	Above and below barcode (font A)
SII_MPM_HRI_BARCODE_TOP_FONT_B	Above barcode (font B)
SII_MPM_HRI_BARCODE_BOTTOM_FONT_B	Below barcode (font B)
SII_MPM_HRI_BARCODE_FONT_B	Above and below barcode (font B)

(19) **NwRatioBarcode**

Enumerator used for specifying the barcode N:W ratio of **printBarcode**.

Constant Name	Description
SII_MPM_NWRATIO_BARCODE_1TO2	1:2
SII_MPM_NWRATIO_BARCODE_1TO2_5	1:2.5
SII_MPM_NWRATIO_BARCODE_1TO3	1:3

(20) **Type2DCode**

Enumerator used for specifying the 2-dimensional barcode type of **print2DCode**.

Constant Name	Description
SII_MPM_TYPE_2DCODE_QR_CODE	QR Code
SII_MPM_TYPE_2DCODE_PDF417	PDF417
SII_MPM_TYPE_2DCODE_DATA_MATRIX	Data Matrix
SII_MPM_TYPE_2DCODE_MAXI_CODE	Maxi Code
SII_MPM_TYPE_2DCODE_GS1_STACKED	GS1 Databar Stacked
SII_MPM_TYPE_2DCODE_GS1_OMNI_DIRECTIONAL	GS1 Databar Stacked Omni-directional
SII_MPM_TYPE_2DCODE_GS1_EXPANDED_STACKED	GS1 Databar Expanded Stacked

(21) **Mode2Dcode**

Enumerator used for specifying the 2-dimensional barcode mode of **print2DCode**.

Constant Name	Description	
SII_MPM_MODE_2DCODE_QR_CODE_MODEL1	QR Code	Model1
SII_MPM_MODE_2DCODE_QR_CODE_MODEL2	QR Code	Model2
SII_MPM_MODE_2DCODE_PDF417_STANDARD	PDF417	Normal Mode
SII_MPM_MODE_2DCODE_PDF417_COMPACT	PDF417	Simple Mode
SII_MPM_MODE_2DCODE_DATA_MATRIX_AUTO	Data Matrix	Module numbers: Automatic
SII_MPM_MODE_2DCODE_DATA_MATRIX_10_10	Data Matrix	Module numbers: 10 × 10

Constant Name	Description	
SII_MPM_MODE_2DCODE_DATA_MATRIX_12_12	Data Matrix	Module numbers: 12 × 12
SII_MPM_MODE_2DCODE_DATA_MATRIX_14_14	Data Matrix	Module numbers: 14 × 14
SII_MPM_MODE_2DCODE_DATA_MATRIX_16_16	Data Matrix	Module numbers: 16 × 16
SII_MPM_MODE_2DCODE_DATA_MATRIX_18_18	Data Matrix	Module numbers: 18 × 18
SII_MPM_MODE_2DCODE_DATA_MATRIX_20_20	Data Matrix	Module numbers: 20 × 20
SII_MPM_MODE_2DCODE_DATA_MATRIX_22_22	Data Matrix	Module numbers: 22 × 22
SII_MPM_MODE_2DCODE_DATA_MATRIX_24_24	Data Matrix	Module numbers: 24 × 24
SII_MPM_MODE_2DCODE_DATA_MATRIX_26_26	Data Matrix	Module numbers: 26 × 26
SII_MPM_MODE_2DCODE_DATA_MATRIX_32_32	Data Matrix	Module numbers: 32 × 32
SII_MPM_MODE_2DCODE_DATA_MATRIX_36_36	Data Matrix	Module numbers: 36 × 36
SII_MPM_MODE_2DCODE_DATA_MATRIX_40_40	Data Matrix	Module numbers: 40 × 40
SII_MPM_MODE_2DCODE_DATA_MATRIX_44_44	Data Matrix	Module numbers: 44 × 44
SII_MPM_MODE_2DCODE_DATA_MATRIX_48_48	Data Matrix	Module numbers: 48 × 48
SII_MPM_MODE_2DCODE_DATA_MATRIX_52_52	Data Matrix	Module numbers: 52 × 52
M SII_MPM_ODE_2DCODE_DATA_MATRIX_64_64	Data Matrix	Module numbers: 64 × 64
SII_MPM_MODE_2DCODE_DATA_MATRIX_72_72	Data Matrix	Module numbers: 72 × 72
SII_MPM_MODE_2DCODE_DATA_MATRIX_80_80	Data Matrix	Module numbers: 80 × 80
SII_MPM_MODE_2DCODE_DATA_MATRIX_88_88	Data Matrix	Module numbers: 88 × 88
SII_MPM_MODE_2DCODE_DATA_MATRIX_96_96	Data Matrix	Module numbers: 96 × 96
SII_MPM_MODE_2DCODE_DATA_MATRIX_104_104	Data Matrix	Module numbers: 104 × 104
SII_MPM_MODE_2DCODE_DATA_MATRIX_120_120	Data Matrix	Module numbers: 120 × 120
SII_MPM_MODE_2DCODE_DATA_MATRIX_132_132	Data Matrix	Module numbers: 132 × 132
SII_MPM_MODE_2DCODE_DATA_MATRIX_144_144	Data Matrix	Module numbers: 144 × 144
SII_MPM_MODE_2DCODE_DATA_MATRIX_8_18	Data Matrix	Module numbers: 8 × 18
SII_MPM_MODE_2DCODE_DATA_MATRIX_8_32	Data Matrix	Module numbers: 8 × 32
SII_MPM_MODE_2DCODE_DATA_MATRIX_12_26	Data Matrix	Module numbers: 12 × 26
SII_MPM_MODE_2DCODE_DATA_MATRIX_12_36	Data Matrix	Module numbers: 12 × 36
SII_MPM_MODE_2DCODE_DATA_MATRIX_16_36	Data Matrix	Module numbers: 16 × 36
SII_MPM_MODE_2DCODE_DATA_MATRIX_16_48	Data Matrix	Module numbers: 16 × 48
SII_MPM_MODE_2DCODE_MAXI_CODE_2	Maxi Code	Mode2
SII_MPM_MODE_2DCODE_MAXI_CODE_3	Maxi Code	Mode3
SII_MPM_MODE_2DCODE_MAXI_CODE_4	Maxi Code	Mode4
SII_MPM_MODE_2DCODE_MAXI_CODE_5	Maxi Code	Mode5
SII_MPM_MODE_2DCODE_NONE	GS1 Databar Stacked GS1 Databar Stacked Omni-directional GS1 Databar Expanded Stacked	No settings

(22) **ModuleSize2DCode**

Enumerator used for specifying the 2-dimensional barcode module size of **print2DCode**.

Constant Name	Description	
SII_MPM_MODULE_SIZE_2DCODE_DEFAULT	QR Code	Default (6 dots)
	PDF417	Default (4 dots)
	Data Matrix	Default (6 dots)
	Maxi Code	No settings
	GS1 Databar Stacked	Default (6 dots)
	GS1 Databar Stacked Omni-directional	Default (6 dots)
	GS1 Databar Expanded Stacked	Default (6 dots)
SII_MPM_MODULE_SIZE_2DCODE_2	QR Code	2 dots
	PDF417	
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	
SII_MPM_MODULE_SIZE_2DCODE_3	QR Code	3 dots
	PDF417	
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	
SII_MPM_MODULE_SIZE_2DCODE_4	QR Code	4 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	
SII_MPM_MODULE_SIZE_2DCODE_5	QR Code	5 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	
SII_MPM_MODULE_SIZE_2DCODE_6	QR Code	6 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	

Constant Name	Description	
SII_MPM_MODULE_SIZE_2DCODE_7	QR Code	7 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	
SII_MPM_MODULE_SIZE_2DCODE_8	QR Code	8 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	
SII_MPM_MODULE_SIZE_2DCODE_9	QR Code	9 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	
SII_MPM_MODULE_SIZE_2DCODE_10	QR Code	10 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	
SII_MPM_MODULE_SIZE_2DCODE_11	QR Code	11 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	
SII_MPM_MODULE_SIZE_2DCODE_12	QR Code	12 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	
SII_MPM_MODULE_SIZE_2DCODE_13	QR Code	13 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	

Constant Name	Description	
SII_MPM_MODULE_SIZE_2DCODE_14	QR Code	14 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	
SII_MPM_MODULE_SIZE_2DCODE_15	QR Code	15 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	
SII_MPM_MODULE_SIZE_2DCODE_16	QR Code	16 dots
	Data Matrix	
	GS1 Databar Stacked	
	GS1 Databar Stacked Omni-directional	
	GS1 Databar Expanded Stacked	

(23) **ErrorCorrect2DCode**

Enumerator used for specifying the 2-dimensional barcode error correction level of **print2DCode**.

Constant Name	Description	
SII_MPM_ERR_CORRECTION_2DCODE_QR_CODE_L	QR Code	L
SII_MPM_ERR_CORRECTION_2DCODE_QR_CODE_M	QR Code	M
SII_MPM_ERR_CORRECTION_2DCODE_QR_CODE_Q	QR Code	Q
SII_MPM_ERR_CORRECTION_2DCODE_QR_CODE_H	QR Code	H
SII_MPM_ERR_CORRECTION_2DCODE_PDF417_0	PDF417	0
SII_MPM_ERR_CORRECTION_2DCODE_PDF417_1	PDF417	1
SII_MPM_ERR_CORRECTION_2DCODE_PDF417_2	PDF417	2
SII_MPM_ERR_CORRECTION_2DCODE_PDF417_3	PDF417	3
SII_MPM_ERR_CORRECTION_2DCODE_PDF417_4	PDF417	4
SII_MPM_ERR_CORRECTION_2DCODE_PDF417_5	PDF417	5
SII_MPM_ERR_CORRECTION_2DCODE_PDF417_6	PDF417	6
SII_MPM_ERR_CORRECTION_2DCODE_PDF417_7	PDF417	7
SII_MPM_ERR_CORRECTION_2DCODE_PDF417_8	PDF417	8
SII_MPM_ERR_CORRECTION_2DCODE_NONE	Data Matrix Maxi Code GS1 Databar Stacked GS1 Databar Stacked Omni-directional GS1 Databar Expanded Stacked	No settings

(24) **LogFileSize**

Enumerator used for specifying the maximum size of the log file of **setLog**.

Constant Name	Description
SII_MPM_LOG_FILE_SIZE_1MB	1 MB (1048576 bytes)
SII_MPM_LOG_FILE_SIZE_5MB	5 MB (5242880 bytes)
SII_MPM_LOG_FILE_SIZE_10MB	10 MB (10485760 bytes)
SII_MPM_LOG_FILE_SIZE_50MB	50 MB (52428800 bytes)

(25) **ErrorCode**

Enumerator used for retrieving the error code by **NSError**.

Constant Name	Description
SII_MPM_ERR_PARAM	Parameter is incorrect.
SII_MPM_ERR_OPENED	Specified printer has already been opened.
SII_MPM_ERR_NOT_OPENED	Specified printer is not opened.
SII_MPM_ERR_TIMEOUT	Timeout or busy state occurs.
SII_MPM_ERR_OFFLINE	Printer is disconnected or offline.
SII_MPM_ERR_CLOSE_FAIL	Failed to disconnect printer.
SII_MPM_ERR_NOT_MONITORING	Monitoring of connecting status is not performed.
SII_MPM_ERR_INIT_FAILED	Failed to initialize.
SII_MPM_ERR_DATA_SIZE_ZERO	0 byte size data is specified.
SII_MPM_ERR_OVER_MAX_DATA_SIZE	Maximum data size is exceeded.
SII_MPM_ERR_INVALID_DATA	Invalid data is specified.
SII_MPM_ERR_INVALID_STATE	Specified to access PrinterManager object for callback.
SII_MPM_ERR_ACCESS	Printer cannot be accessed.
SII_MPM_ERR_CANCELED	Function is canceled.
SII_MPM_ERR_WRITE_FAULT	Data cannot be sent to printer.
SII_MPM_ERR_FILE_INVALID	Specified file is invalid.
SII_MPM_ERR_ENCODE_FAILED	Error has occurred in encoding text data.
SII_MPM_ERR_NOT_FOUND	Specified file cannot be found.
SII_MPM_ERR_TRANSACTION_STOPPED	Batch process is not started.
SII_MPM_ERR_PRINTER_STATUS_ERROR	Printer status is abnormal.

Chapter 5

Sample Program

This chapter describes the sample programs provided by the SDK.

5.1 Sample Program Overview

The SDK includes a sample program of XCode project format.

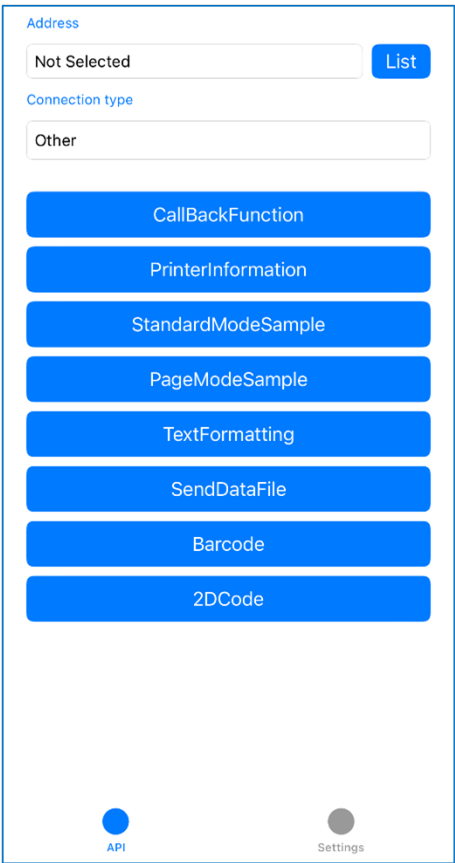 


Figure 5-1

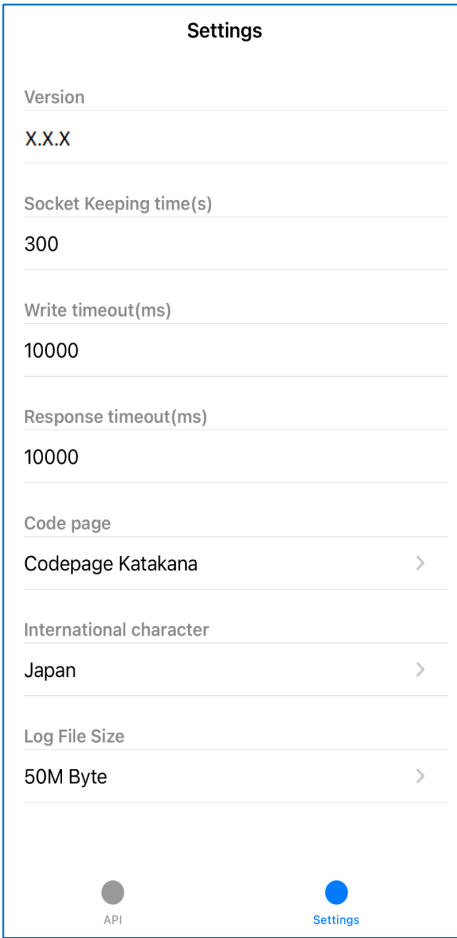 


Figure 5-2

5.2 Sample Program Function

This section describes the functions of the sample program.

5.2.1 API Window

(1)	<div>Address</div> <div>Not Selected</div> <div>List</div>
(2)	<div>Connection type</div> <div>Other</div>
(3)	<div>CallBackFunction</div>
(4)	<div>PrinterInformation</div>
(5)	<div>StandardModeSample</div>
(6)	<div>PageModeSample</div>
(7)	<div>TextFormatting</div>
(8)	<div>SendDataFile</div>
(9)	<div>Barcode</div>
(10)	<div>2DCode</div>

API

Settings

Figure 5-3

The functions of the sample program are as shown in Table 5-1.

Table 5-1 Function of Sample Program

No.	Description	Remarks
(1)	Address	Specifies printer address. By tapping [List] button, searches the Bluetooth device or TCP/IP device. The list of devices searched by startDiscoveryPrinter (Bluetooth) or startDiscoveryPrinter (TCP/IP) is displayed. By selecting a printer to connect from the list, Bluetooth address or IP address can be entered. Example: "00:11:22:AA:BB:CC", "192.168.0.190"
(2)	Connection type	Selects connection type to a printer.
(3)	CallbackFunction	Registers the callback of the printer status change in startCallbackFunction , and displays the change of status information in a dialog.
(4)	PrinterInformation	Retrieves the printer information from the printer by using getPrinterInformation , getPrinterInformationNumber and getPrinterInformationString .
(5)	StandardModeSample	In the standard mode, sends the sample receipt printing command created by various printing method to the printer.
(6)	PageModeSample	In the page mode, sends the sample receipt printing command created by various printing method to the printer.
(7)	TextFormatting	Sends the printing command formatted by various characters formatting to the printer.
(8)	SendDataFile	Sends the specified file by using sendDataFile to the printer.
(9)	Barcode	Sends the barcode printing command by using printBarcode to the printer.
(10)	2DCode	Sends the 2-dimensional barcode printing command by using print2Dcode to the printer.

5.2.2 Settings Window

The screenshot shows a 'Settings' window with a list of configuration items. Each item is highlighted with a red box and a number in parentheses. The items are: (1) Version (X.X.X), (2) Socket Keeping time(s) (300), (3) Write timeout(ms) (10000), (4) Response timeout(ms) (10000), (5) Code page (Codepage Katakana), (6) International character (Japan), and (7) Log File Size (50M Byte). At the bottom, there are two buttons: 'API' (grey) and 'Settings' (blue).

Settings	
(1)	Version X.X.X
(2)	Socket Keeping time(s) 300
(3)	Write timeout(ms) 10000
(4)	Response timeout(ms) 10000
(5)	Code page Codepage Katakana >
(6)	International character Japan >
(7)	Log File Size 50M Byte >
<div><div>API</div><div>Settings</div></div>	

Figure 5-4

The functions of the sample program are as shown in Table 5-2.

Table 5-2 Settings Window

No.	Description	Remarks
(1)	Version	Displays the SDK version built in the sample program.
(2)	Socket Keeping time(s)	Sets the socket keeping time of TCP/IP connection in s (milliseconds). This setting value is used in <code>socketKeepingTime</code> which is the parameter of <code>open</code> .
(3)	Write timeout(ms)	Sets the time until the send timeout occurrence in ms (milliseconds).
(4)	Response timeout(ms)	Sets the time until the receive timeout occurrence in ms (milliseconds).
(5)	Code page	Sets the codepage. This is the encoding when printing texts (when text files are specified by <code>TextFormatting</code> or <code>SendDataFile</code>) and the character setting value for printer side.
(6)	International character	Sets the international character set. This is the international character setting value for printer side when printing texts (when text files are specified by <code>TextFormatting</code> or <code>SendDataFile</code>).
(7)	Log File Size	Sets the log file size to be stored by using <code>setLog</code> .

5.3 Precaution

No guarantee of proper operation and support are provided for sample programs.

Sample programs are subject to change without notice.

Chapter 6

Disclaimer

We closely monitor the development of this software in order to avoid problems. However, we are not responsible for any damages arising out of the use of this software.

Appendix A

Character Sets (Character Code Table)

A.1 Character Code Table

(When SII_MPM_INT_CHAR_SET_USA is set in the setting of international character set)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	¢	£	¥	℔	ƒ
A0	á	í	ó	ú	ñ	Ñ	ä	ö	í	¬	½	¼	¿	«	»	
B0	☐	☐	☐		†	‡	§	¶	§		¶		¶		¶	
C0	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞
D0	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞
E0	α	β	Γ	π	Σ	σ	μ	τ	φ	θ	Ω	δ	∞	φ	ε	Π
F0	≡	±	≥	≤	∫	∫	÷	≈	°	•	•	√	n	2	■	

Figure A-1 SII_MPM_CODEPAGE_437 (USA, Standard Europe)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80																
90																
A0	。	「	」	、	・	ヲ	ア	イ	ウ	エ	オ	ヤ	ユ	ヨ	ッ	
B0	ー	ア	イ	ウ	エ	オ	カ	キ	ク	ケ	コ	サ	シ	ス	セ	ソ
C0	タ	チ	ツ	テ	ト	ナ	ニ	ヌ	ネ	ノ	ハ	ヒ	フ	ヘ	ホ	マ
D0	ミ	ム	メ	モ	ヤ	ユ	ヨ	ラ	リ	ル	レ	ロ	ワ	ン	ゝ	。
E0																
F0																

Figure A-2 SII_MPM_CODEPAGE_KATAKANA

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	â	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ü	ÿ	Ö	Ü	ø	£	Ø	×	ƒ
A0	á	í	ó	ú	ñ	Ñ	ä	ö	¿	®	¬	½	¼	¡	«	»
B0	☐	☐	☐			Á	Â	À	©	¶		¶	¶	¢	¥	₱
C0	⊥	⊥	⊥	⊥	⊥	ã	Ã	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	=	ℓ	α
D0	ð	Đ	Ê	Ë	È	Í	Î	Ï	⌋	⌋	■	■	■	■	■	■
E0	Ó	β	Ô	Ò	Õ	μ	þ	þ	Ú	Û	Ü	ý	Ý	-	'	
F0	-	±	=	¾	¶	§	÷	,	°	…	.	¹	³	²	■	

Figure A-3 SII_MPM_CODEPAGE_850 (Multilingual)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ã	à	Á	ç	ê	Ê	è	Í	Ô	ì	Ã	Â
90	É	À	È	ô	õ	ò	Ú	ù	Ï	Ö	Ü	¢	£	Ù	Þ	Ó
A0	á	í	ó	ú	ñ	Ñ	ä	ö	ï	ò	¬	½	¼	¡	«	»
B0	☐	☐	☐													
C0	L	L	T	T	T	T	T	T	T	T	T	T	T	T	T	T
D0	L	T	T	L	L	F	T	T	T	T	T	T	T	T	T	T
E0	α	β	Γ	π	Σ	σ	μ	τ	φ	θ	Ω	δ	∞	φ	ε	Π
F0	≡	±	≥	≤		J	÷	≈	°	•	•	√	n	2	■	

Figure A-4 SII_MPM_CODEPAGE_860 (Portuguese)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	Â	à	¶	ç	ê	ë	è	ï	î	≡	À	§
90	É	È	Ê	ô	Ë	Ï	Ô	Ù	¤	Ô	Ü	¢	£	Ù	û	f
A0		'	ó	ú	..	³	-	î	¬	¬	½	¼	¾	«	»	
B0	☐	☐	☐													
C0	L	L	T	T	T	T	T	T	T	T	T	T	T	T	T	T
D0	L	T	T	L	L	F	T	T	T	T	T	T	T	T	T	T
E0	α	β	Γ	π	Σ	σ	μ	τ	φ	θ	Ω	δ	∞	φ	ε	Π
F0	≡	±	≥	≤		J	÷	≈	°	•	•	√	n	2	■	

Figure A-5 SII_MPM_CODEPAGE_863 (Canadian-French)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ü	ÿ	Ö	Ü	ø	£	Ø	Þ	ƒ
A0	á	í	ó	ú	ñ	Ñ	ä	ö	¿	¬	½	¼	¡	«	»	
B0	☐	☐	☐													
C0	L	L	T	T	T	T	T	T	T	T	T	T	T	T	T	T
D0	L	T	T	L	L	F	π	π	π	π	π	π	π	π	π	π
E0	α	β	Γ	π	Σ	σ	μ	τ	φ	θ	Ω	δ	∞	φ	ε	Π
F0	≡	±	≥	≤		J	÷	≈	°	•	•	√	n	2	■	

Figure A-6 SII_MPM_CODEPAGE_865 (Nordic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ü	ÿ	Ö	Ü	ø	£	Ø	Ş	ş
A0	á	í	ó	ú	ñ	Ñ	Ğ	ğ	¿	®	¬	½	¼	¡	«	»
B0	☐	☐	☐			Á	Â	À	©							
C0	L	L	T	T	T	ã	Ã	L	π	π	π	π	π	π	π	π
D0	α	β	Ê	Ë	È	Í	Î	Ï	J	Γ	■	■		Ì	■	
E0	Ó	β	Ô	Ò	Õ	Ö	μ	×	Ú	Û	Ü	Ý	ÿ	-	'	
F0	-	±	¾	¶	§	÷	,	°	…	•	1	3	2	■		

Figure A-7 SII_MPM_CODEPAGE_857 (Turkish)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	A	B	Γ	Δ	E	Z	H	Θ	I	K	Λ	M	N	Ξ	O	Π
90	P	Σ	T	Υ	Φ	X	Ψ	Ω	α	β	γ	δ	ε	ζ	η	θ
A0	ι	κ	λ	μ	ν	ξ	ο	π	ρ	σ	ς	τ	υ	φ	χ	ψ
B0	⋈	⋈	⋈		†	‡	§	¶	⋈	⋈	⋈	⋈	⋈	⋈	⋈	⋈
C0	L	⊥	T	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
D0	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
E0	ω	ά	έ	ή	ϊ	ί	ό	ύ	ϋ	ώ	Ά	Έ	Ή	Ί	Ό	Υ
F0	Ω	±	≥	≤	İ	ÿ	÷	≈	°	•	•	√	n	2	■	

Figure A-8 SII_MPM_CODEPAGE_737 (Greek)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€	‚	ƒ	„	…	†	‡	^	‰	Š	<	Œ		Ž		
90	‘	‚	“	”	•	-	-	~	™	š	>	œ		ž	ÿ	
A0	ı	¢	£	¤	¥	¦	§	¨	©	ª	«	¬	-	®	¯	
B0	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾	¿
C0	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D0	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
E0	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F0	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ	ÿ

Figure A-9 SII_MPM_CODEPAGE_1252 (Latin)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П
90	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	Э	Ю	Я
A0	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п
B0	␣	␣	␣													
C0	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣
D0	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣
E0	р	с	т	у	ф	х	ц	ч	ш	щ	ъ	ы	ь	э	ю	я
F0	Ё	ё	Є	є	İ	ı	Ÿ	ÿ	°	•	•	√	№	α	■	

Figure A-10 SII_MPM_CODEPAGE_866 (Russian)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	û	ç	ł	ë	ő	ö	î	ž	Ä	Ć	
90	É	Í	í	ô	ö	Ĺ	ĺ	Š	š	Ö	Ü	ř	ť	Ł	×	č
A0	á	í	ó	ú	Ą	ą	Ž	ž	Ę	ę	¬	ž	Č	š	«	»
B0	␣	␣	␣			Á	Â	Ě	Š				Ž	ž		
C0	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣
D0	đ	Đ	Ď	Ě	ď	Ň	í	î	ě	Ĵ	␣	␣	␣	␣	␣	␣
E0	ó	ß	ô	ń	ň	š	š	ř	ú	ř	Ů	ý	ý	ť	´	
F0	-	"	˘	˘	Š	÷	˘	˘	˘	˘	Ů	Ř	ř	■		

Figure A-11 SII_MPM_CODEPAGE_852 (Eastern Europe)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	Ç	ü	é	â	ä	à	â	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ü	ö	Ü	ø	£	Ø	×	f	
A0	á	í	ó	ú	ñ	Ñ	ä	ö	¿	®	¬	½	¼	¡	«	»
B0	☐	☐	☐			Á	Â	À	©	¶	¶	¶	¶	¢	¥	₱
C0	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
D0	ð	Ð	Ê	Ë	È	€	Í	Î	Ï	⌋	⌋	■	■	■	■	■
E0	Ó	β	Ô	Ò	Õ	μ	þ	þ	Ú	Û	Ü	ý	Ý	-	'	
F0	-	±	=	¾	¶	§	÷	,	°	..	.	1	3	2	■	

Figure A-12 SII_MPM_CODEPAGE_858 (Euro)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	ђ	Ђ	ѓ	Ѓ	ё	Ё	є	Є	ѕ	Ѕ	і	І	ї	Ї	ј	Ј
90	љ	Љ	њ	Њ	ћ	Ћ	ќ	Ќ	џ	Џ	џ	џ	џ	џ	џ	џ
A0	а	А	б	Б	в	В	г	Г	д	Д	е	Е	ф	Ф	г	Г
B0	☐	☐	☐			х	Х	и	И	¶	¶	¶	¶	й	Й	₱
C0	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
D0	л	Л	м	М	н	Н	о	О	п	П	■	■	■	■	■	■
E0	я	Я	р	Р	с	С	т	Т	у	У	ж	Ж	в	В	ь	№
F0	-	ы	Ы	э	Э	ш	Ш	э	Э	щ	Щ	ч	Ч	§	■	

Figure A-13 SII_MPM_CODEPAGE_855 (Cyrillic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	°	•	•	√	■	-		+	+	+	+	+	+	+	+	+
90	β	∞	φ	±	½	¼	≈	«	»	لأ	لأ					لا
A0	-	ĩ	£	¤	£			ل	ب	ث	ج	ح	خ	ح	خ	خ
B0	•	١	٢	٣	٤	٥	٦	٧	٨	٩	ف	س	ش	ص	ش	؟
C0	¢	ء	آ	أ	ؤ	ع	ئ	ب	ة	ث	ج	ح	خ	د	خ	د
D0	ذ	ر	ز	س	ش	ص	ض	ط	ظ	ع	غ		÷	×	ع	
E0	-	ف	ق	ك	ل	م	ن	ه	و	ي	ض	ع	غ	م	غ	م
F0	-	ء	ن	ه	و	ي	ض	ع	غ	م	غ	م	غ	م	غ	م

Figure A-14 SII_MPM_CODEPAGE_864 (Arabic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€	‘	’	“	”	…	†	‡	§	Š	Š	Š	Š	Š	Š	Š
90	€	‘	’	“	”	•	-	-	™	š	š	š	š	š	š	š
A0	˘	˘	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł
B0	°	±	±	±	±	±	±	±	±	±	±	±	±	±	±	±
C0	Ř	Á	Â	Ä	Ä	Ä	Ä	Ä	Ä	Ä	Ä	Ä	Ä	Ä	Ä	Ä
D0	Đ	Ň	Ň	Ó	Ô	Ö	Ö	Ö	Ö	Ö	Ö	Ö	Ö	Ö	Ö	Ö
E0	ř	á	â	ä	ä	ä	ä	ä	ä	ä	ä	ä	ä	ä	ä	ä
F0	đ	ň	ň	ó	ô	ö	ö	ö	ö	ö	ö	ö	ö	ö	ö	ö

Figure A-15 SII_MPM_CODEPAGE_1250 (Central European)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	ђ	ѓ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ
90	ђ	ѓ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ
A0	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ
B0	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ	џ
C0	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П
D0	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	Э	Ю	Я
E0	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п
F0	р	с	т	у	ф	х	ц	ч	ш	щ	ъ	ы	ь	э	ю	я

Figure A-16 SII_MPM_CODEPAGE_1251 (Cyrillic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€	‘	’	“	”	…	†	‡	‰	™	™	™	™	™	™	™
90	€	‘	’	“	”	…	†	‡	‰	™	™	™	™	™	™	™
A0	“	À	£	¤	¥	¦	§	¨	©	ª	«	¬	®	¯	°	±
B0	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾	¿
C0	í	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	Μ	Ν	Ξ	Ο
D0	Π	Ρ	Σ	Τ	Υ	Φ	Χ	Ψ	Ω	Ϊ	Ϋ	ά	έ	ή	ί	ί
E0	ύ	α	β	γ	δ	ε	ζ	η	θ	ι	κ	λ	μ	ν	ξ	ο
F0	π	ρ	ς	σ	τ	υ	φ	χ	ψ	ω	ϊ	ϋ	ό	ύ	ώ	

Figure A-17 SII_MPM_CODEPAGE_1253 (Greek)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
20	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€	‘	‚	“	”	…	†	‡	^	‰	Š	<	£			
90		‚	‚	“	”	•	-	-	~	™	š	>	œ			ÿ
A0	ı	¢	£	¤	¥	¦	§	¨	©	ª	«	¬	®	¯		
B0	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾	¿
C0	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D0	Ğ	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	İ	Ş	ß
E0	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F0	ğ	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ı	ş	ÿ

Figure A-18 SII_MPM_CODEPAGE_1254 (Turkish)

A.2 International Character Set

Print results of the specific character codes vary depending on the setting of the international character set. The following table shows the specific character codes and their print results.

	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
COUNTRY_USA	#	\$	@	[\]	^	`	{		}	~
COUNTRY_FRANCE	#	\$	à	°	ç	§	^	`	é	ù	è	..
COUNTRY_GERMANY	#	\$	§	Ä	Ö	Ü	^	`	ä	ö	ü	ß
COUNTRY_ENGLAND	£	\$	@	[\]	^	`	{		}	~
COUNTRY_DENMARK_1	#	\$	@	Æ	Ø	Å	^	`	æ	ø	å	~
COUNTRY_SWEDEN	#	α	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü
COUNTRY_ITALY	#	\$	@	°	\	é	^	ù	à	ò	è	ì
COUNTRY_SPAIN	£	\$	@	ì	Ñ	¿	^	`	..	ñ	}	~
COUNTRY_JAPAN	#	\$	@	[¥]	^	`	{		}	~
COUNTRY_NORWAY	#	α	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü
COUNTRY_DENMARK_2	#	\$	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü
COUNTRY_SPAIN_2	#	\$	á	ì	Ñ	¿	é	`	í	ñ	ó	ú
COUNTRY_LATIN_AMERICA	#	\$	á	ì	Ñ	¿	é	ü	í	ñ	ó	ú
COUNTRY_ARABIA	#	\$	@	[\]	^	`	{		}	~

Figure A-19 International Character Set



Seiko Instruments Inc.
1-8, Nakase, Mihama-ku, Chiba-shi,
Chiba 261-8507, Japan
Print System Division
Telephone:+81-43-211-1106
Facsimile:+81-43-211-8037

Seiko Instruments USA Inc.
Thermal Printer Div.
21221 S. Western Avenue, Suite 250, Torrance, CA 90501, USA
Telephone:+1-310-517-7778 Facsimile:+1-310-517-7779

Seiko Instruments GmbH (Economic operator)
Siemensstrasse 9, D-63263 Neu-Isenburg, Germany
Telephone:+49-6102-297-0 Facsimile:+49-6102-297-50100
info@seiko-instruments.de

Seiko Instruments Trading (H.K.) Ltd.
7/F, Ying Tung Industrial Building, 802 Lai Chi Kok Road, Kowloon, Hong Kong
Telephone:+852-2494-5111 Facsimile:+852-2424-0901

Seiko UK Ltd. (Authorized Representative in the United Kingdom)
SC House, Vanwall Road, Maidenhead, Berkshire, SL6 4UW

(Specifications are subject to change without notice.)